



Appendix for Coda-DNC260-Presets G700 Series 131022

MEM	Preset Name	PGM Type	Out 1 (Source)	Out 2 (Source)	Out 3 (Source)	Out 4 (Source)	Out 5 (Source)	Out 6 (Source)
1	G712P-L	stereo	G712P-L (A)	G712P-L (A)	G712P-L (A)	G712P-L (B)	G712P-L (B)	G712P-L (B)
2	G712P-FR	stereo	G712P-FR (A)	G712P-FR (A)	G712P-FR (A)	G712P-FR (B)	G712P-FR (B)	G712P-FR (B)
3	G712P-M	stereo	G712P-M (A)	G712P-M (A)	G712P-M (A)	G712P-M (B)	G712P-M (B)	G712P-M (B)
4	G712PxG15o90	stereo	G712P (A)	G15SUB (A)	G712P (A)	G712P (B)	G15SUB (B)	G712P (B)
5	G712PxG18o70	stereo	G712P (A)	G18SUB-70 (A)	G712P (A)	G712P (B)	G18SUB-70 (B)	G712P (B)
6	G712PxSC4-70	stereo	G712P (A)	SC4 (A)	G712P (A)	G712P (B)	SC4 (B)	G712P (B)
7	G712PxSCP-70	stereo	G712P (A)	SCP-70 (A)	G712P (A)	G712P (B)	SCP-70 (B)	G712P (B)
8	G712PxSCP-90	stereo	G712P (A)	SCP-90 (A)	G712P (A)	G712P (B)	SCP-90 (B)	G712P (B)
10	G712A-L	stereo	Mute (A)	G712-Low-L (A)	G712-Hi-L (A)	Mute (B)	G712-Low-L (B)	G712-Hi-L (B)
11	G712A-FR	stereo	Mute (A)	G712-Low-FR (A)	G712-Hi-FR (A)	Mute (B)	G712-Low-FR (B)	G712-Hi-FR (B)
12	G712A+G15-S	stereo	G15 (A)	G712-Low-L (A)	G712-Hi-L (A)	G15 (B)	G712-Low-L (B)	G712-Hi-L (B)
14	G715P-L	stereo	G715-L (A)	G715-L (A)	G715-L (A)	G715-L (B)	G715-L (B)	G715-L (B)
15	G715P-FR	stereo	G715P-FR (A)	G715P-FR (A)	G715P-FR (A)	G715P-FR (B)	G715P-FR (B)	G715P-FR (B)
16	G715P-M	stereo	G715-P-Monit (A)	G715-P-Monit (A)	G715-P-Monit (A)	G715-P-Monit (B)	G715-P-Monit (B)	G715-P-Monit (B)
17	G715PxG15-70	stereo	G715Px70 (A)	G15SUBx70 (A)	G715Px70 (A)	G715Px70 (B)	G15SUBx70 (B)	G715Px70 (B)
18	G715PxG15-90	stereo	G715Px90 (A)	G15SUBx90 (A)	G715Px90 (A)	G715Px90 (B)	G15SUBx90 (B)	G715Px90 (B)
19	G715PxG18-70	stereo	G715Px70 (A)	G18SUBx70 (A)	G715Px70 (A)	G715Px70 (B)	G18SUBx70 (B)	G715Px70 (B)
20	G715PxSC4-70	stereo	G715P (A)	SC4 (A)	G715P (A)	G715P (B)	SC4 (B)	G715P (B)
21	G715PxSC4-90	stereo	G715P (A)	SC4 (A)	G715P (A)	G715P (B)	SC4 (B)	G715P (B)
22	G715PxSCP-70	stereo	G715P (A)	SCP-70 (A)	G715P (A)	G715P (B)	SCP-70 (B)	G715P (B)
23	G715PxSCP-90	stereo	G715P (A)	SCP-90 (A)	G715P (A)	G715P (B)	SCP-90 (B)	G715P (B)
25	G715A-L	stereo	Mute (A)	G715-Low-L (A)	G715-Hi-L (A)	Mute (B)	G715-Low-L (B)	G715-Hi-L (B)
26	G715A-FR	stereo	Mute (A)	G715-Low-FR (A)	G715-Hi-FR (A)	Mute (B)	G715-Low-FR (B)	G715-Hi-FR (B)
27	G715AxSC4-70	stereo	SC4 (A)	G715-Low (A)	G715-Hi (A)	SC4 (B)	G715-Low (B)	G715-Hi (B)
28	G715AxSC4-90	stereo	SC4 (A)	G715-Low (A)	G715-Hi (A)	SC4 (B)	G715-Low (B)	G715-Hi (B)
29	G715AxSCP-70	stereo	SCP (A)	G715-Low (A)	G715-Hi (A)	SCP (B)	G715-Low (B)	G715-Hi (B)
30	G715AxSCP-90	stereo	SCP (A)	G715-Low (A)	G715-Hi (A)	SCP (B)	G715-Low (B)	G715-Hi (B)
45	G700 131022							

Shortcut description	
1	G712 passive, linear preset
2	G712 passive, fullrange preset
3	G712 passive, monitor preset
4	G712 passive + G15-Sub with crossover at 90 Hz
5	G712 passive + G18-Sub with crossover at 70 Hz
6	G712 passive + SC4 with crossover at 70 Hz
7	G712 passive + SCP with crossover at 70 Hz
8	G712 passive + SCP with crossover at 90 Hz
10	G712 bi-amp, linear preset
11	G712 bi-amp, fullrange preset
12	G712 bi-amp + G15-Sub
14	G715 passive, linear preset
15	G715 passive, fullrange preset
16	G715 passive, monitor preset
17	G715 passive + G15-Sub with crossover at 70 Hz
18	G715 passive + G15-Sub with crossover at 90 Hz
19	G715 passive + G18-Sub with crossover at 70 Hz
20	G715 passive + SC4 with crossover at 70 Hz
21	G715 passive + SC4 with crossover at 90 Hz
22	G715 passive + SCP with crossover at 70 Hz
23	G715 passive + SCP with crossover at 90 Hz
25	G715 bi-amp, linear preset
26	G715 bi-amp, fullrange preset
27	G715 bi-amp + SC4 with crossover at 70 Hz
28	G715 bi-amp + SC4 with crossover at 90 Hz
29	G715 bi-amp + SCP with crossover at 70 Hz
30	G715 bi-amp + SCP with crossover at 90 Hz
45	G700 Series 131022