


# CODA

C O D A A U D I O




## LINUS V908

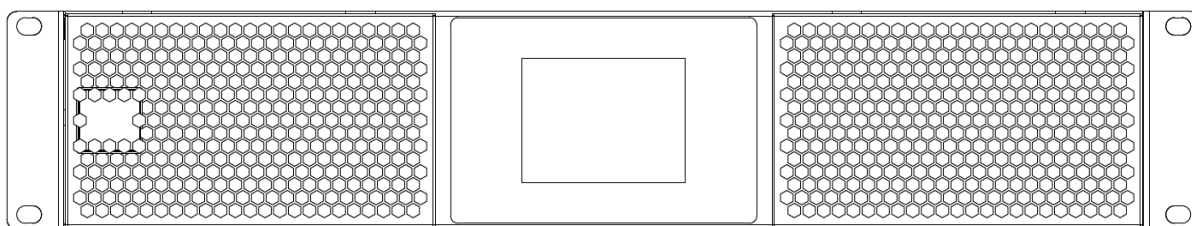

**INFORMATION FOR USE  
FOR MODELS CODA AUDIO  
LINUS V908/D**

The leading version of this brochure is the English one which shall prevail to the exclusion of the national translation on hand.

**USER MANUAL v1.0**

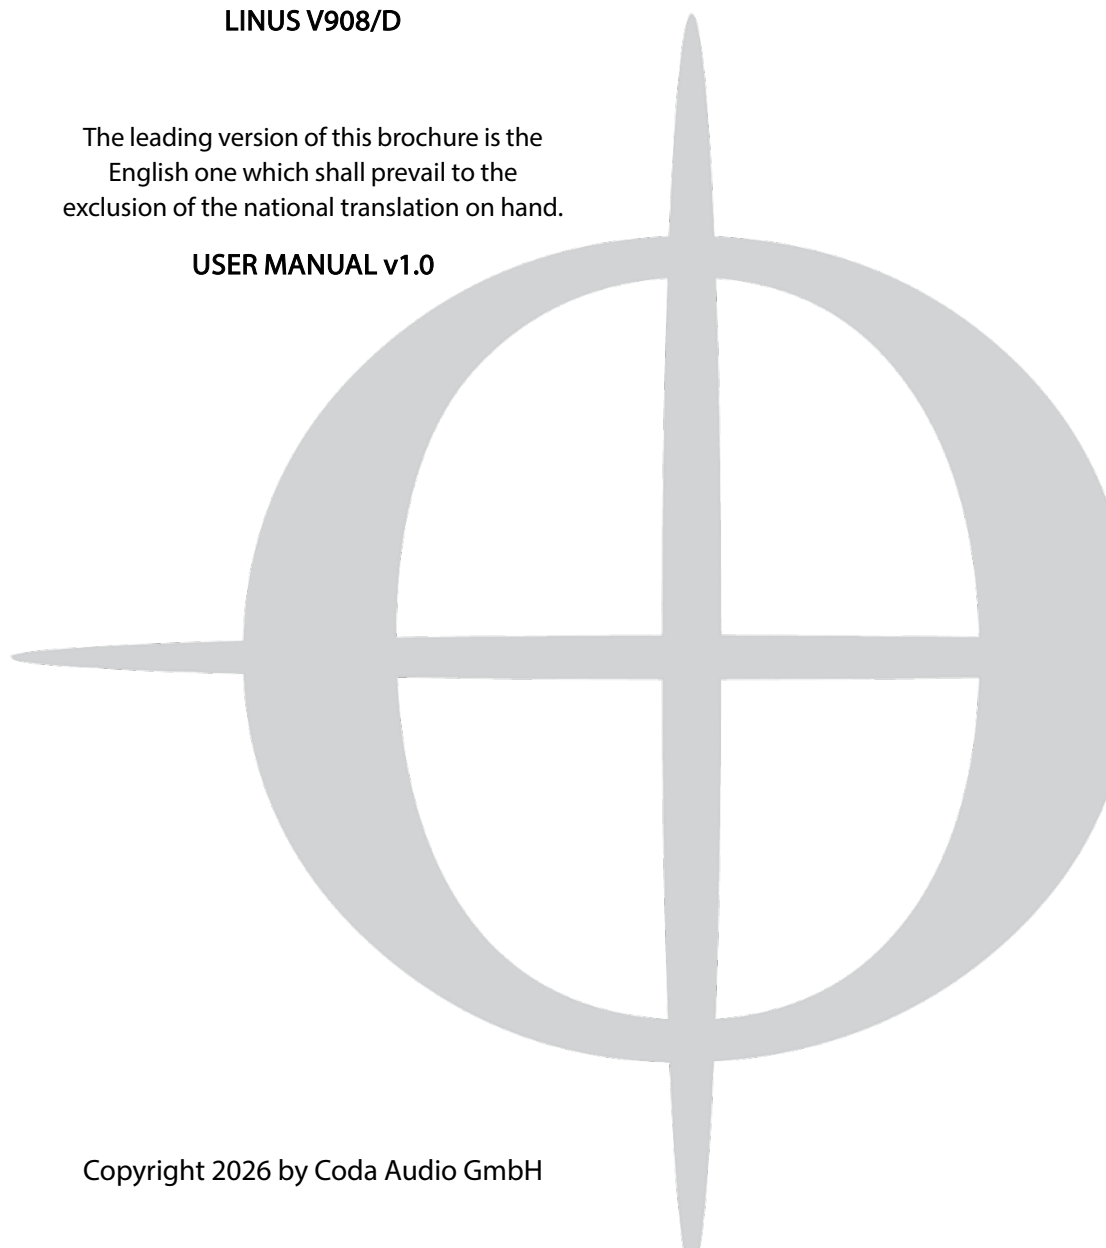



Manufacturer

Address: **CODA Audio GmbH**  
**Boulevard der EU 6**  
**D-30539 Hannover Germany**

Telephone: **+49 (0) 511 866 55 888**

Fax: **+49 (0) 511 866 55 887**

Internet: **[www.codaaudio.com](http://www.codaaudio.com)**

Email: **[contact@codaaudio.com](mailto:contact@codaaudio.com)**

Subject to change. Please visit our website [www.codaaudio.com](http://www.codaaudio.com) for the latest version of this User Manual. Please note that the leading version of CODA Audio manuals is always the English one.



## TABLE OF CONTENTS

|  |           |
|--|-----------|
| <b>TABLE OF CONTENTS</b> .....                   | <b>3</b>  |
| <b>IMPORTANT SAFETY INSTRUCTIONS</b> .....       | <b>5</b>  |
| <b>CE CONFORMITY</b> .....                       | <b>9</b>  |
| <b>CONSIGNES DE SÉCURITÉ IMPORTANTES</b> .....   | <b>10</b> |
| <b>CE CONFORMITÉ</b> .....                       | <b>14</b> |
| <b>WICHTIGE SICHERHEITSHINWEISE</b> .....        | <b>15</b> |
| <b>EU-KONFORMITÄTSEKTLÄRUNG</b> .....            | <b>19</b> |
| <b>安全上の注意</b> .....                              | <b>20</b> |
| <b>EU 適合性</b> .....                              | <b>24</b> |
| <b>1. WELCOME TO CODA AUDIO</b> .....            | <b>25</b> |
| <b>2. THE AMPLIFIER</b> .....                    | <b>26</b> |
| 2.1 Unpacking .....                              | 26        |
| 2.2 The amplifier.....                           | 26        |
| <b>3. INSTALLATION</b> .....                     | <b>28</b> |
| 3.1 Mounting .....                               | 28        |
| 3.2 Cooling.....                                 | 28        |
| 3.3. <b>Mains</b> .....                          | 28        |
| 3.4 Signal inputs .....                          | 30        |
| 3.5 Remote control inputs (Ethernet / PoE) ..... | 31        |
| 3.6 Power outputs.....                           | 31        |
| 3.7 GPI Remote control .....                     | 34        |
| 3.8 Relay Remote control .....                   | 34        |
| <b>4. OPERATION</b> .....                        | <b>35</b> |
| 4.1 Front panel user interface.....              | 35        |
| 4.2 App control.....                             | 43        |
| 4.2.3 App-Menu.....                              | 46        |
| 4.4 Mains protection .....                       | 49        |
| 4.5 Main SMPS protection.....                    | 49        |
| 4.6 Fans .....                                   | 49        |
| <b>5. SPECIFICATION</b> .....                    | <b>50</b> |
| <b>6. PERFORMANCE</b> .....                      | <b>54</b> |
| <b>7. WARRANTY</b> .....                         | <b>56</b> |
| 7.1 Warranty.....                                | 56        |



|            |   |           |
|------------|---|-----------|
| 7.2        | Items excluded from this warranty .....           | 56        |
| 7.3        | What CODA Audio will do .....                     | 56        |
| 7.4        | How to obtain warranty service.....               | 56        |
| 7.5        | CODA Audio's product improvement .....            | 56        |
| 7.6        | WARRANTY FORM .....                               | 57        |
| <b>8.</b>  | <b>MAINTENANCE INFORMATION .....</b>              | <b>58</b> |
| <b>9.</b>  | <b>DECOMMISSIONING .....</b>                      | <b>58</b> |
| <b>10.</b> | <b>WHAT'S IN THE BOX.....</b>                     | <b>58</b> |
| <b>11.</b> | <b>NOTES – CHANGES MADE TO THE AMPLIFIER.....</b> | <b>59</b> |



## IMPORTANT SAFETY INSTRUCTIONS

### 1. General

The amplifier may only be used in accordance with the information provided in the user manual. Before and during the usage of the amplifier please ensure that all recommendations, especially the safety recommendations as detailed in the user manual, are adhered to. The CODA Audio LINUS amplifier is designed for the amplification of pulsed audio signals. The amplifier should only be connected to loudspeakers with an average impedance as indicated.

### 2. User manual

Read the information before use (user manual) and heed all warnings. During the lifetime of the amplifier keep this user manual together with the warranty certificate in a safe place for later reference. The user manual forms an integral part of the amplifier. It is recommended to check the CODA Audio website for any updates and new versions of this manual.

Reselling the amplifier is only possible if the user manual is available. In case of reselling the amplifier, the reseller has to document any changes made to the amplifier in writing and pass the documentation on to the buyer.

### 3. Environments

Use this amplifier only in E1, E2, E3, E4 or E5 environments according to IEC/EN 55103-2:2010 "Electromagnetic compatibility - Product family standard for audio, video, and audio-visual and entertainment lighting control apparatus for professional use - Part 2: Immunity".

### 4. Mounting/placement

Do not place this amplifier on an unstable cart, stand, tripod, bracket, or table. The amplifier may fall, causing serious injury and serious damage to the product. Any mounting of the amplifier should follow the manufacturer's instructions. CODA Audio can recommend suitable mounting racks and accessories.

### 5. Mains connection

The amplifier may only be connected to a socket with a protective earth conductor. This is a class 1 device that always requires an external earth connection. A missing earth may cause unexpected and high voltages present on the metal casing and surrounding conductors. The main power switch on the front panel is a 'soft' switch. Ensure that the mains power can be isolated from the amplifier at any time.

### 6. Power cord protection

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon them or against them, paying particular attention to cords and plugs and the point where they exit from the amplifier. If the cord is damaged in any way obtain a replacement cord before further use.



### 7. Heat

Do not use this amplifier near any heat sources such as radiators, heaters, stoves, or other apparatus that produce heat.

### 8. Water and moisture

Do not expose this device to rain or moisture. Do not use this amplifier near water (for example swimming pools and fountains). Do not place any objects containing liquids, such as bottles or glasses, on the top of the unit. Do not splash liquids on the unit. There is no protection against splashing water (IP-20 equipment).

### 9. Ventilation

Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the amplifier and to protect it from overheating. These openings must not be blocked or covered. This amplifier should not be installed unless proper ventilation is provided, and the following instructions are adhered to. When installing into racks, careful consideration should be taken to ensure that the force air cooling operates to its maximum efficiency. Cold air is drawn in through the front of the unit, with the hot air expelled from the rear. Ensure that the rear is not obstructed to allow the heat to escape. Do not install the amplifier above or below any other equipment that has a different forced air flow cooling design. If a space is to be left between multiple units, then a fixed rack space blank should be used. A vented or slotted space should not be used as this can significantly reduce the efficiency of the forced air cooling of the unit.

### 10. Interference of external objects and/or liquids with the appliance

Never push objects of any kind into this amplifier through any openings, as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill liquid of any kind on the amplifier. Do not use the amplifier in a place where is the potential risk of objects/liquids falling onto or into the amplifier. Where possible, the amplifier should always be used within a protective case or rack.

### 11. Connections

Before connecting external equipment to the amplifier, ensure that it is safe to do so. Remove the mains supply from the equipment where necessary. Failure to do so may cause an electric shock and serious personal injury. Read the user manual of the other equipment carefully and follow the instructions when making the connections.

### 12. Lightning

For additional protection of this amplifier during lightning storms or when it is left unattended and/or unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the amplifier due to lightning and power line surges. Disconnection from the mains power supply can only be achieved by removing the plug from the mains socket or by external disconnecting all poles from the mains.



### 13. Damages that require service

Unplug this amplifier from the mains supply and refer to your dealer/distributor or other authorized repair workshop if any of the following situations occur:

- if liquid has been spilled or objects have fallen into the amplifier,
- if the amplifier has been exposed to rain or moisture
- if the amplifier has been dropped or damaged in any way,
- if the power supply cord or plug has been damaged,
- when the amplifier exhibits a distinct change from its normal function or performance,
- in case the amplifier has been used in a dusty environment for quite a period of time.

### 14. Servicing

All service and repair work must be carried out by a dealer/distributor authorized by CODA Audio. Do not attempt to service this amplifier yourself. Opening or removing covers may expose you to dangers or other hazards. The amplifier may only be opened by qualified personnel. Please refer to your dealer/distributor.

### 15. Spare parts

When spare parts are required, the dealer/distributor will only use spare parts specified by the manufacturer. The use of unauthorized spare parts may result in injury and/or damage through fire or electric shock or other electricity-related hazards.

### 16. Safety check

Upon completion of any service or repairs to this product, other than by the factory, ask the dealer/distributor to perform safety checks to determine that the amplifier works properly. Recommendations on how to carry out the safety test can be found in DIN VDE 0701-0702 "Maintenance, Modification and Test of Electronic Appliances".

### 17. Cleaning

Ensure that periodic cleaning of the dust filters is carried out to maintain the best possible cooling. Monitor the environment that the amplifier is operating in and adjust the cleaning frequency as necessary. Unplug this amplifier from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Clean only with dry cloth. For more details refer to chapter 8 "Maintenance Information" (p. 38).

### 18. Packaging and shipping



When shipping the CODA Audio LINUS amplifier, always use the original shipping carton and packing materials. For maximum protection repack the unit as it was originally packed at the factory.


### 19. Altitude (for China)

The amplifier shall be operated at altitudes below or equal 2000 m.





|   |   |   |  |
|---|---|---|--|
|  | <b>CAUTION</b><br>RISK OF ELECTRIC SHOCK<br>DO NOT OPEN |  | <b>CAUTION - HIGH VOLTAGE HAZARDS<br/>EXIST WITHIN THIS PRODUCT.</b><br><br>REFER ALL SERVICING TO<br>AUTHORIZED PERSONNEL |
|---|---|---|--|


|   |   |
|---|---|
|  | <b>THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL IS INTENDED TO<br/>ALERT THE USER TO THE PRESENCE OF UNINSULATED DANGEROUS<br/>VOLTAGE WITHIN THE PRODUCT'S ENCLOSURE.</b> |
|---|---|

|   |  |
|---|--|
|  | <b>THE EXCLAMATION MARK IS INTENDED TO ALERT THE USER<br/>TO IMPORTANT INSTRUCTIONS ALSO FOR MAINTENANCE<br/>IN THE LITERATURE ACCOMPANYING THE AMPLIFIER.</b> |
|---|--|

|   |   |
|---|---|
|  | <b>WARNING - TO PREVENT FIRE OR SHOCK HAZARD, DO<br/>NOT EXPOSE THIS AMPLIFIER TO RAIN OR MOISTURE.</b> |
|---|---|

|   |   |
|---|---|
|  | <b>CAUTION - RISK OF ELECTRIC SHOCK- DO NOT OPEN.</b> |
|---|---|

|   |   |
|---|---|
|  | <b>THE AMPLIFIER SHALL ONLY BE OPERATED AT<br/>ALTITUDES BELOW OR EQUAL 2000 m.</b> |
|---|---|

|   |   |
|---|---|
|  | <b>THE AMPLIFIER MAY ONLY BE CONNECTED<br/>TO A SOCKET WITH A PROTECTIVE EARTH CONDUCTOR.</b> |
|---|---|



## CE CONFORMITY

### Declaration of conformity in accordance to EC Directives:

Electromagnetic compatibility (Council Directive 2014/30/EU, EMC)  
Low-voltage electrical equipment (Council Directive 2014/35/EU, LVD)  
2011/65/EU (RoHS2 Directive)



Manufacturer's name: **CODA Audio GmbH**

Manufacturer's address: **Boulevard der EU 6, 30539 Hannover, Germany**



declares that the product with the model name: **LINUS V Series** conforms to the following standards:

CISPR 32:2015  
CISPR 32:2015 + A1:2019  
IEC 61000-3-2:2018 + A1:2020  
IEC 62368-1:2023

The operating conditions and application environments presupposed in the information for use (user manual) are to be kept accordingly.

**Svetlomir Aleksandrov**

**EC DECLARATION OF CONFORMITY**

Hannover, 14.10.2026

At the end of its life, this product may not be disposed of in the normal waste, but rather must be disposed of at a collection point for recycling electrical and electronic devices. The materials are recyclable according to their labelling. You make an important contribution to protecting our environment by reusing, recycling or utilising old devices in other ways. Please ask the municipal administration where the appropriate disposal facility is located.





## CONSIGNES DE SÉCURITÉ IMPORTANTES

### 1. Général

L'amplificateur ne doit être utilisé qu'en conformité avec les informations indiquées dans le manuel d'utilisation. Avant et pendant l'utilisation de l'amplificateur, s'assurer que toutes les consignes, surtout les consignes de sécurité décrites dans le mode d'emploi sont respectées. L'amplificateur LINUS a été construit pour l'amplification de signaux audio pulsés et ne doit être branché qu'à des enceintes ayant une impédance moyenne comme celle indiquée.

### 2. Mode d'emploi

Lisez les instructions d'utilisation (Manuel Utilisateur) et prêtez attention à tous les avertissements. Conserver ce mode d'emploi dans un endroit protégé durant toute la vie d'utilisation de l'amplificateur. Ce mode d'emploi fait partie intégrante de l'amplificateur. Il est recommandé de visiter régulièrement le site web de CODA Audio afin d'obtenir les mises à jour et nouvelles versions de ce manuel. La revente de l'amplificateur n'est possible qu'avec le mode d'emploi. Tout changement subi par l'amplificateur doit être documenté par écrit et transmis à l'acheteur dans le cas d'une revente.

### 3. Environnement

N'utilisez l'amplificateur que dans les environnements classés E1, E2, E3, E4 ou E5 selon la norme IEC/EN 55103-2 : 2010

« Compatibilité électromagnétique - Norme de famille de produits pour les appareils à usage professionnel audio, vidéo, audiovisuels et de commande de lumière pour spectacles. Immunité Norme de famille de produits pour les appareils à usage professionnel audio, vidéo, audiovisuels et de commande de lumière pour spectacles - Partie 2 : Immunité ».

### 4. Installation/emplacement

Ne pas placer l'amplificateur sur un chariot, un stand, un trépied, un support ou une table instable. Le produit pourrait chuter, s'endommager sérieusement et provoquer de graves blessures. Pour l'installation de l'amplificateur, observez les instructions du fabricant et utilisez les accessoires recommandés par le fabricant.

### 5. Connection secteur

Branchez l'amplificateur uniquement à une prise électrique avec une connexion à la terre. Ceci est un appareil de Classe 1 qui nécessite une connexion électrique avec prise de terre lors de chaque utilisation. Un défaut de terre peut être à l'origine de hautes tensions présentes sur le châssis métallique. L'interrupteur électrique étant un modèle 'soft', assurez-vous de la bonne isolation de l'amplificateur par rapport à l'alimentation électrique.

### 6. Protection du cordon d'alimentation

Les câbles d'alimentation électriques sont à disposer de manière à ne pas être piétinés ou coincés par des objets placés au-dessus ou contre eux-mêmes, tout en faisant attention aux câbles et aux fiches et particulièrement au connecteur de sortie de l'amplificateur. Le dispositif de déconnexion du secteur (le câble et connecteur secteur ou le disjoncteur thermique) doit être accessible à tout instant. Si le cordon d'alimentation est endommagé, prenez soin d'en changer avant chaque nouvelle utilisation.



## 7. Chaleur

Ne pas utiliser l'amplificateur près de sources de chaleur comme les radiateurs, les corps chauffants, les fourneaux ou d'autres dispositifs qui produisent de la chaleur.

## 8. Eau et humidité

Ne pas exposer le Produit à la pluie ou à l'humidité, ne pas utiliser le Produit à proximité d'eau et ne pas utiliser le Produit s'il est mouillé (par exemple dans des pièces humides ou près d'une piscine). Ne placez jamais des objets contenant des liquides sur le produit (comme par exemple des bouteilles ou des verres). Ne versez pas de liquides sur le Produit. Il s'agit d'un produit IP20 sans protection contre les éclaboussures.

## 9. Ventilation

Les grilles et les ouvertures dans le boîtier servent à la ventilation et assurent un bon fonctionnement de l'amplificateur tout en le protégeant de la surchauffe. Ces ouvertures ne doivent être ni bloquées ni couvertes. L'amplificateur ne doit être installé que dans un endroit convenablement ventilé et aéré, selon les recommandations du fabricant données dans ce manuel. Lors d'une installation en Rack, assurez-vous d'une aération maximum afin de permettre le refroidissement de l'appareil. L'air froid rentre par l'avant de l'appareil alors que l'air chaud sortira par l'arrière. Assurez-vous que l'arrière de l'appareil n'est pas obstrué afin de permettre une bonne extraction de la chaleur. N'installez pas l'amplificateur ni au dessus ni au dessous d'un appareil n'ayant pas le même système de refroidissement. Si un espace doit-être laissé entre plusieurs appareils alors vous devrez ajouter des faces avant dans les Racks afin de combler ces vides. Aucun ventilateur ni système spécial ne devra être utilisé car ils pourraient réduire le refroidissement naturel de l'appareil.

## 10. Intrusion d'objets externes et / ou liquides dans l'amplificateur

Ne jamais introduire d'objets d'aucune sorte dans l'amplificateur au travers des ouvertures car ils pourraient être en contact avec des tensions électriques dangereuses ou provoquer un court-circuit de composants et ainsi un feu ou un choc électrique. Ne jamais renverser de liquide sur l'amplificateur. N'utilisez pas l'amplificateur dans un lieu où des objets, du liquide pourrait couler sur ou dans l'amplificateur.

## 11. Branchements

Avant de connecter des équipements externes à l'amplificateur, assurez-vous de pouvoir le faire en toute sécurité. Débranchez l'alimentation électrique des équipements externes si besoin. Faute de quoi il y a un risque de choc électrique et de lésions sérieuses. Lisez attentivement le mode d'emploi des autres dispositifs et suivez les instructions des autres équipements lors de tous branchements

## 12. Foudre

Pour une protection renforcée de l'amplificateur, le débrancher de la prise secteur pendant les orages ou quand il est sans surveillance et / ou non utilisé pendant un temps prolongé. Ainsi, vous éviterez un endommagement de l'amplificateur dû à la foudre et aux surtensions. La déconnexion du secteur n'est possible qu'en retirant la prise de l'alimentation générale ou en débranchant tous les contacts du réseau électrique.



### 13. Dommages nécessitant une intervention

Dans les cas suivants, débranchez l'amplificateur du réseau électrique et contactez votre revendeur / distributeur ou un atelier autorisé :

- du liquide a été renversé ou des objets sont tombés dans l'amplificateur
- l'amplificateur a été exposé à la pluie ou à l'humidité
- l'amplificateur est tombé ou a été abîmé de quelque façon que ce soit
- le cordon d'alimentation ou la fiche électrique est endommagé
- l'amplificateur ne fonctionne pas de manière normale comme décrit dans le mode d'emploi
- l'amplificateur a été utilisé dans un environnement poussiéreux pendant un temps prolongé

### 14. Entretien

Toute opération de maintenance ou réparation doit être effectuée par un revendeur / distributeur certifié par CODA Audio. N'essayez pas d'entretenir l'amplificateur par vous-même. L'ouverture de l'amplificateur ou retirer le capot pourrait vous exposer à une tension électrique dangereuse ou à d'autres risques, l'amplificateur ne doit être ouvert que par du personnel qualifié. Veuillez contacter votre revendeur / distributeur.

### 15. Réparation et pièces de rechange

Si des pièces de rechange sont nécessaire, assurez-vous que votre revendeur / distributeur n'utilise que des pièces de rechange certifiées par le constructeur. L'utilisation de pièces de rechange non autorisées peut causer des lésions et / ou des endommagements par le feu, choc électrique, ou d'autres dangers d'origine électrique.

### 16. Contrôle de sécurité

Après un entretien ou une réparation du produit fait en dehors de l'Usine, demander au revendeur / distributeur de faire des contrôles de sécurité pour s'assurer que l'amplificateur est en parfait état de fonctionnement. Des conseils pour

les contrôles de sécurité se trouvent dans la norme DIN VDE 0701-0702, « Entretien, modifications et test des appareils électriques ».

### 17. Nettoyage

Assurez-vous de nettoyer périodiquement les filtres à poussière en face avant afin d'assurer un refroidissement optimal de l'appareil. Surveillez l'environnement dans lequel l'amplificateur fonctionne et ajuster les fréquences de nettoyage des filtres en conséquence. Débrancher l'amplificateur de la prise électrique avant de le nettoyer. Ne pas utiliser de produits liquides ou vaporisés. Nettoyez uniquement avec des linges secs. Voir également 8. "Maintenance Information", p. 38.

### 18. Emballage et expédition



Pour expédier l'amplificateur LINUS veuillez toujours utiliser le carton et l'emballage d'origine. Pour une protection maximale, toujours emballer l'unité comme elle l'a été à sa sortie d'usine.

### 19. Altitude (pour la Chine)

L'amplificateur ne doit pas être utilisé à des altitudes dépassant 2000 m.






|   |  |   |   |
|---|--|---|---|
|  | <b>ATTENTION</b><br>RISQUE DE CHOC ÉLECTRIQUE<br>NE PAS OUVRIR |  | ATTENTION — CE PRODUIT PRÉSENTE<br>DES RISQUES ASSOCIÉS AU<br>COURANT ÉLEVÉ. TOUT SERVICE<br>DOIT ÊTRE EFFECTUÉ PAR DU<br>PERSONNEL AUTORISÉ. |
|---|--|---|---|

|   |  |
|---|--|
|  | L'ÉCLAIR AVEC LE SYMBOLE DE LA FLÈCHE SERT À AVERTIR<br>L'UTILISATEUR DE LA PRÉSENCE D'UNE TENSION NON ISOLÉE<br>À L'INTÉRIEUR DE LA CAISSE. |
|---|--|

|   |   |
|---|---|
|  | LE POINT D'EXCLAMATION SERT ÉGALEMENT À AVERTIR L'UTILISATEUR<br>D'INSTRUCTIONS IMPORTANTES POUR L'ENTRETIEN CONTENUES DANS<br>LA DOCUMENTATION DE L'AMPLIFICATEUR. |
|---|---|

|   |  |
|---|--|
|  | AVERTISSEMENT — POUR ÉVITER DU FEU OU DES CHOCES<br>ÉLECTRIQUES, NE PAS EXPOSER CET AMPLIFICATEUR<br>À LA PLUIE OU À L'HUMIDITÉ. |
|---|--|

|   |  |
|---|--|
|  | ATTENTION — RISQUE DE CHOC ÉLECTRIQUE — NE PAS OUVRIR. |
|---|--|

|   |   |
|---|---|
|  | L'AMPLIFICATEUR NE DOIT PAS ÊTRE UTILISÉ À DES ALTITUDES<br>DÉPASSANT 2000 m. |
|---|---|

|   |  |
|---|--|
|  | NE BRANCHER CET AMPLIFICATEUR UNIQUEMENT À<br>UNE PRISE RELIÉE À LA TERRE. |
|---|--|



CE CONFORMITÉ

Déclaration de conformité CE selon les directives CE :

Compatibilité électromagnétique (Directive 2014/30/EU Conseil Européen, EMC)  
Basse tension (Directive 2014/35/EU du Conseil Européen, LVD) 2011/65/EU (RoHS2)



Nom du constructeur : **CODA Audio GmbH**

Adresse du constructeur : **Boulevard der EU 6, 30539 Hannover, Allemagne**

déclare que le produit avec le nom de modèle : Amplificateur **LINUS V Series** est  
en conformité avec  
les normes suivantes :

CISPR 32:2015

CISPR 32:2015 + A1:2019

IEC 61000-3-2:2018 + A1:2020

IEC 62368-1:2023

Les conditions d'utilisation ainsi que les environnements d'exploitation décrits dans  
le mode d'emploi sont à respecter scrupuleusement.



Svetlomir Aleksandrov

EC DECLARATION OF CONFORMITY

Hannover, 01.06.2024

Au terme de son utilisation ce produit ne doit pas être éliminé avec les déchets ménagers habituels, mais il doit être déposé dans un point de collecte pour le recyclage d'appareils électriques et électroniques. Les matériaux sont recyclables conformément à leur identification. Grâce à la réutilisation, le recyclage de matériaux ou d'autres formes de recyclage de vieux appareils vous contribuez de manière significative à la protection de notre environnement. Veuillez contacter votre municipalité pour connaître le centre de traitement compétent.





## WICHTIGE SICHERHEITSHINWEISE

### 1. Allgemeines

Der Verstärker darf nur in Übereinstimmung mit den Anweisungen und Informationen in dieser Anleitung genutzt werden. Stellen Sie vor und während der Nutzung des Verstärkers sicher, dass allen Anweisungen, insbesondere den Sicherheitsanweisungen Folge geleistet wird. Die CODA Audio LINUS Verstärker sind darauf ausgelegt ein gepulstes Audiosignal zu verarbeiten und zu verstärken. An den Verstärker dürfen ausschließlich Lautsprecher mit den in dieser Anleitung spezifizierten Impedanzen angeschlossen werden.

### 2. Anleitung

Lesen Sie die Anleitung vor der Benutzung des Verstärkers sorgfältig und beachten Sie alle Warnungen und Sicherheitshinweise. Bewahren Sie diese Bedienungsanleitung zusammen mit dem Garantieschein zum späteren Nachschlagen an einem sicheren Ort auf. Diese stellt einen integralen Bestandteil des Verstärkers dar. Wir empfehlen die CODA Audio Webseite regelmäßig nach Updates und/oder neuen Versionen der Anleitung zu prüfen. Der Wiederverkauf des Verstärkers ist nur möglich, wenn die Benutzeranleitung vorhanden ist. Im Falle des Wiederverkaufs ist der Wiederverkäufer verpflichtet alle Änderungen, die er am Verstärker vorgenommen hat, zu dokumentieren und dem Käufer zur Verfügung zu stellen.

### 3. Einsatzumgebung

Benutzen Sie den Verstärker nur in E1, E2, E3, E4 oder E5 Umgebungen gemäß IEC/EN 55103-2:2010 „Elektromagnetische Verträglichkeit - Produktfamilienorm für Audio-, Video- und audiovisuelle Einrichtungen sowie für Studio-Lichtsteuereinrichtungen für professionellen Einsatz - Teil 2: Störfestigkeit“.

### 4. Montage/Aufstellung

Platzieren Sie den Verstärker nicht auf einem instabilen Wagen, Ständer, Dreibein, Rahmen oder Tisch. Dies kann zu ernsthaften Verletzungen von Personen und/oder Beschädigungen des Verstärkers führen. Jegliche Montage darf nur gemäß der Anleitung des Herstellers erfolgen. Es ist nur Montagezubehör zu verwenden, welches vom Hersteller freigegeben wurde.

### 5. Netzanschluss

Der Verstärker darf nur an Anschlüsse mit einem dedizierten Erdungsleiter angeschlossen werden. Bei dem Verstärker handelt es sich um ein Gerät der Gerätekategorie 1, welches zu jeder Zeit geerdet sein muss. Fehlende Erdung kann unerwartete und hohe Spannungen am Gehäuse und den umliegenden Leitungen verursachen. Da es sich beim Hauptschalter auf der Vorderseite des Gerätes um einen Soft-Switch handelt, muss sichergestellt werden, dass der Verstärker jederzeit vollständig von der Stromquelle getrennt/isoliert werden kann.

### 6. Netzkabelschutz

Das Netzkabel muss immer so verlegt werden, dass es nicht eingeklemmt, geknickt, überfahren, überlaufen, oder beschädigt werden kann. Dabei ist insbesondere auf die verstärkerseitigen Anschlüsse der Kabel zu achten, da es hier ansonsten auch zu Beschädigungen des Verstärkers kommen kann. Falls Kabel in jedweder Weise beschädigt sind, sorgen Sie für entsprechenden Ersatz vor der weiteren Verwendung.



### 7. Umgebungstemperatur

Setzen Sie den Verstärker nicht in der Nähe von Hitzequellen wie Heizungen, Heizlüftern, Thermen, Herden oder anderen Wärmequellen ein.

### 8. Wasser und Feuchtigkeit

Setzen Sie den Verstärker nicht Regen oder Feuchtigkeit aus. Setzen Sie den Verstärker nicht in der Nähe von Wasser (z.B. Schwimmbecken, Brunnen) ein. Stellen Sie keine Gegenstände auf dem Verstärker ab, die Flüssigkeit enthalten (z.B. Gläser, Tassen, Flaschen). Schützen Sie den Verstärker gegen Spritzwasser. Es handelt sich hierbei um IP20 Equipment.

### 9. Belüftung

Die Schächte und Öffnungen am Kabinett sind für die Ventilation vorgesehen, um einen verlässlichen Betrieb des Verstärkers zu gewährleisten und diesen vor Überhitzung zu schützen. Diese Öffnungen dürfen nicht blockiert oder verdeckt werden. Der Verstärker darf nicht installiert werden, sofern keine ausreichende Belüftung sichergestellt ist. Bei der Installation in einem Gehäuse ist dafür Sorge zu tragen, dass ein ungehinderter Luftstrom zur Sicherstellung der maximalen Kühlleistung, gewährleistet ist. Kalte Luft wird durch den vorderen Teil des Gerätes eingeblasen und die heiße Luft an der Rückseite des Gerätes wieder ausgestoßen. Stellen Sie sicher, dass die Rückseite nicht blockiert ist und die heiße Luft daran hindert zu entweichen. Es ist untersagt den Verstärker ober- oder unterhalb eines Gerätes zu installieren, welches ein anderes Luftstromdesign hat. Wenn mehrere Geräte zusammen in einem Rack montiert werden, muss zwischen den einzelnen Geräten ein Platzhalter fest installiert werden. Dieser Platzhalter darf weder luftdurchlässig noch mit Luftschlitzen versehen sein, da dies signifikant die Leistungsfähigkeit des Luftstroms verringert.

### 10. Störung durch externe Objekte und/oder Flüssigkeiten

Versuchen Sie niemals Objekte jedweder Art durch die Öffnungen in den Verstärker zu bekommen. Dies kann zu Kontakt mit spannungsführenden Elementen führen, was einen Brand und/oder elektrischen Schlag verursachen kann. Verschütten Sie niemals Flüssigkeiten jedweder Art auf das Gerät. Verwenden Sie den Verstärker nicht in einer Umgebung, in der potentiell Gegenstände und/oder Flüssigkeit auf und/oder in den Verstärker gelangen könnten. Der Verstärker sollte möglichst in einem schützenden Gehäuse und/oder Rack verwendet werden.

### 11. Verbindung

Bevor Sie externes Equipment an den Verstärker anschließen, prüfen Sie, ob es sicher ist, dies zu tun. Trennen Sie das Equipment von der Stromversorgung, wenn notwendig. Zuwiderhandlungen können zu einem Stromschlag und ernsthaften Verletzungen führen. Lesen Sie Bedienungsanleitung des anzuschließenden Gerätes sorgfältig bevor Sie die Verbindung herstellen.

### 12. Blitzschlag

Trennen Sie den Verstärker vom Netz für zusätzlichen Schutz des Verstärkers während eines Gewitters oder wenn dieser für längere Zeit nicht benutzt/beaufsichtigt wird. Dies verhindert eine Beschädigung des Verstärkers durch Blitzeinschlag und/oder Netzschwankungen. Eine vollständige Trennung des Verstärkers vom Stromnetz erfolgt nur durch Abziehen des Netzsteckers.



### 13. Schäden, die Serviceleistungen erfordern

Trennen Sie den Verstärker vom Stromnetz und kontaktieren Sie Ihren Händler/Distributor oder ein autorisiertes Service Center, wenn eine der folgenden Situationen eingetreten ist:

- Flüssigkeit wurde auf den Verstärker verschüttet,
- Fremdkörper sind in den Verstärker gelangt,
- der Verstärker war Regen oder Feuchtigkeit ausgesetzt,
- der Verstärker wurde mechanisch beschädigt,
- das Netzkabel/der Netzstecker sind beschädigt,
- der Verstärker zeigt ein abnormales Verhalten im Betrieb,
- der Verstärker wurde längere Zeit in einer staubigen Umgebung eingesetzt.

### 14. Service

Jegliche Reparaturarbeiten müssen durch eine von CODA Audio autorisierte Stelle durchgeführt werden. Versuchen Sie nicht den Verstärker selbst zu reparieren, da das Öffnen des Verstärkers Sie gefährlichen Spannungen und anderen Risiken aussetzen kann. Der Verstärker darf nur von qualifiziertem und autorisiertem Personal geöffnet werden. Bitte wenden Sie sich an Ihren Händler.

### 15. Ersatzteile

Sofern Ersatzteile benötigt werden, stellen Sie bitte sicher, dass Ihr Händler nur vom Hersteller freigegebenen Ersatzteile benutzt. Die Nutzung von nicht freigegebenen Ersatzteilen kann Verletzungen und/oder Schäden durch Feuer, Stromschlag oder andere verwandte elektrische Gefahren verursachen.

### 16. Sicherheitstest

Nach Beendigung von Servicearbeiten an dem Produkt ist es ratsam Sicherheitstests vom Hersteller oder einem von ihm autorisierten Servicepartner (z.B. Händler/Vertrieb) durchführen zu lassen, um sicher zu stellen, dass der Verstärker sachgemäß funktioniert. Empfehlungen zur Durchführung eines solchen Tests können der DIN VDE 0701-0702 „Instandsetzung, Änderung und Prüfung elektrischer Geräte“ entnommen werden.

### 17. Reinigung

Stellen Sie sicher, dass die Staubfilter regelmäßig gereinigt werden, um die bestmögliche Kühlung des Verstärkers aufrechtzuerhalten. Achten Sie auf die Betriebsumgebung des Verstärkers und stimmen Sie die Reinigung der Staubfilter dementsprechend ab. Trennen Sie den Verstärker vom Netz bevor Sie mit der Reinigung beginnen. Benutzen Sie nur einen trockenen Lappen und keine flüssigen Reiniger oder Aerosole. Vgl. dazu auch 8. "Maintenance Information", S. 3.

### 18. Verpackung und Versand

Nutzen Sie für den Versand des Verstärkers nur die originale Kartonage. Für ein Maximum an Sicherheit soll der Verstärker vor dem Versand so verpackt werden, wie er ursprünglich vom Werk geliefert wurde.



### 19. Einsatzhöhe

Der Verstärker soll nur in Höhen bis 2000 m über Meeresspiegel eingesetzt werden.






SYMBOLE

|   |   |   |  |
|---|---|---|--|
|  | <b>VORSICHT</b><br>NICHT ÖFFNEN<br>STROMSCHLAGGEFAHR. |  | VORSICHT: PRODUKT UNTER HOCHSPANNUNG. ÜBERLASSEN SIE JEDLICHE WARTUNGSARBEITEN AUTORISIERTEM KUNDENDIENST. |
|---|---|---|--|

|   |  |
|---|--|
|  | DAS BLITZSYMBOL WARNT DEN BENUTZER VOR NICHTISOLIERTEN GEFÄHRLICHEN SPANNUNGEN INNERHALB DES GEHÄUSES. |
|---|--|

|   |  |
|---|--|
|  | DAS AUSRUFEZEICHEN SOLL BENUTZER AUF WICHTIGE BEDIENUNGS- UND WARTUNGSANLEITUNGEN IN DER DEM VERSTÄRKER BEIGEFÜGTEN LITERATUR AUFMERKSAM MACHEN. |
|---|--|

|   |   |
|---|---|
|  | WARNUNG: UM BRAND ODER STROMSCHLAG AUSZUSCHLIESSEN, DARF DIESER VERSTÄRKER WEDER REGEN NOCH FEUCHTIGKEIT AUSGESETZT WERDEN. |
|---|---|

|   |   |
|---|---|
|  | VORSICHT: NICHT ÖFFNEN – STROMSCHLAGGEFAHR. |
|---|---|

|   |   |
|---|---|
|  | DER VERSTÄRKER DARF NUR IN HÖHE BIS 2000 M EINGESETZT WERDEN. |
|---|---|

|   |   |
|---|---|
|  | DER VERSTÄRKER DARF NUR AN VERSORGNUNGSNETZEN MIT SCHUTZLEITER (ERDÜNG) ANGESCHLOSSEN WERDEN. |
|---|---|

**EU-KONFORMITÄTSERKLÄRUNG**

**EU-Konformitätserklärung gemäß den EU-Richtlinien:** Elektromagnetische Verträglichkeit (EU-Richtlinie 2014/30/EU, EMC) Elektrische Niederspannungsprodukte (EU-Richtlinie 2014/35/EU, LVD) 2011/65/EU (RoHS2-Richtlinie)



Name des Herstellers: **CODA Audio GmbH**

Adresse des Herstellers: **Boulevard der EU 6, 30539 Hannover, Deutschland**

erklärt, dass das Produkt mit der Modellbezeichnung: **LINUS V Series** den folgenden Normen entspricht:

CISPR 32:2015

CISPR 32:2015 + A1:2019

IEC 61000-3-2:2018 + A1:2020

IEC 62368-1:2023

Die in den Benutzerinformationen angegebenen Betriebsbedingungen sind entsprechend einzuhalten.

**Svetlomid Aleksandrov**

EU-Konformitätserklärung

Hannover, 01.06.2024

Dieses Produkt darf am Ende seiner Lebensdauer nicht über den normalen Abfall entsorgt werden, sondern muss an einem Sammelpunkt für das Recycling von elektrischen und elektronischen Geräten abgegeben werden. Die Werkstoffe sind gemäß ihrer Kennzeichnung wiederverwertbar. Mit der Wiederverwendung, der stofflichen Verwertung oder anderen Formen der Verwertung von Altgeräten leisten Sie einen wichtigen Beitrag zum Schutz unserer Umwelt. Bitte erfragen Sie bei der Gemeindeverwaltung die zuständige Entsorgungsstelle.





## 安全上の注意

### 重要な安全上の注意事項

#### 1. 一般事項

本アンプは、本取扱説明書に記載された指示および情報に従ってのみ使用してください。アンプの使用前および使用中は、特に安全上の注意事項を含むすべての指示が遵守されていることを確認してください。

CODA Audio LINUS アンプは、パルス化されたオーディオ信号を処理・増幅するよう設計されています。本アンプには、本書に指定されたインピーダンスを持つスピーカーのみを接続してください。

#### 2. 取扱説明書

アンプを使用する前に、本取扱説明書を注意深く読み、すべての警告および安全上の注意事項を遵守してください。本取扱説明書は保証書とともに、安全な場所に保管してください。本書はアンプの重要な構成要素です。

CODA Audio の公式ウェブサイトを定期的に確認し、取扱説明書の更新や新しいバージョンがないか確認することを推奨します。

本アンプの再販売は、取扱説明書が付属している場合にのみ可能です。再販売時には、販売者はアンプに加えたすべての変更点を文書化し、購入者に提供する義務があります。

#### 3. 使用環境

本アンプは、IEC/EN 55103-2:2010「電磁両立性 — プロ用オーディオ、ビデオおよび視聴覚機器ならびにスタジオ照明制御装置の製品群規格 — 第2部：耐性」に基づく、E1、E2、E3、E4、または E5 環境でのみ使用してください。

#### 4. 設置／据え付け

不安定なカート、スタンド、三脚、フレーム、またはテーブルの上にアンプを設置しないでください。人身事故やアンプの破損につながるおそれがあります。

設置は必ずメーカーの指示に従って行い、メーカーが認可した取り付けアクセサリのみを使用してください。

#### 5. 電源接続

本アンプは、専用の保護接地導体を備えた電源にのみ接続してください。本製品はクラス1 機器であり、常に接地されている必要があります。接地が不十分な場合、筐体や周辺配線に危険な高電圧が発生するおそれがあります。

前面の主電源スイッチはソフトスイッチであるため、アンプを常に完全に電源から切り離せる状態にしておく必要があります。

#### 6. 電源コードの保護

電源コードは、挟まれたり、折れ曲がったり、踏まれたり、損傷したりしないように配線してください。特にアンプ側の接続部に注意してください。

電源コードが損傷している場合は、使用を続ける前に必ず交換してください。

#### 7. 周囲温度



暖房機、ヒーター、温水器、調理器具などの熱源の近くでアンプを使用しないでください。

## 8. 水分・湿気

アンプを雨や湿気にさらさないでください。水（プール、噴水など）の近くで使用しないでください。

液体を含む物（グラス、カップ、ボトルなど）をアンプの上に置かないでください。

本製品は IP20 機器であり、防滴仕様ではありません。

## 9. 換気

筐体の通気口は、アンプの信頼性の高い動作と過熱防止のためのものです。これらの開口部を塞いだり覆ったりしないでください。

十分な換気が確保できない場合、アンプを設置しないでください。

ラックやケースに設置する場合は、最大限の冷却性能を確保するため、空気の流れが妨げられないようにしてください。冷却空気は前面から吸気され、背面から排気されます。背面が塞がれていないことを確認してください。

異なる空気流設計を持つ機器の上下にアンプを設置することは禁止されています。複数の機器をラックに設置する場合は、各機器の間に密閉型のスペーサーを固定してください（通気孔付きは禁止）。

## 10. 異物・液体の侵入

開口部から物体を挿入しないでください。通電部に接触し、火災や感電の原因となるおそれがあります。

アンプに液体をこぼさないでください。異物や液体が侵入する可能性のある環境では使用しないでください。

可能な限り、保護ケースまたはラック内で使用してください。

## 11. 接続

外部機器を接続する前に、安全であることを確認してください。必要に応じて、機器の電源を切断してください。

接続する機器の取扱説明書を事前に必ずお読みください。

## 12. 雷

雷雨時や長期間使用しない場合は、保護のためアンプを電源から切り離してください。

完全に電源から切り離すには、電源プラグを抜く必要があります。



### 13. 修理が必要な損傷

以下のいずれかが発生した場合は、電源を切断し、販売店または認定サービスセンターに連絡してください。

液体がこぼれた

異物が内部に入った

雨や湿気にさらされた

機械的な損傷がある

電源コードまたはプラグが損傷している

異常な動作を示す

長期間、粉塵の多い環境で使用された

### 14. サービス

修理は必ず CODA Audio が認可したサービス拠点で行ってください。アンプを自分で修理しないでください。内部には危険な電圧が存在します。筐体の開放は、資格を有する認定技術者のみが行えます。

### 15. 交換部品

交換部品が必要な場合は、メーカー認可の純正部品のみが使用されていることを確認してください。

非認可部品の使用は、火災や感電などの危険を伴う可能性があります。

### 16. 安全試験

修理後は、メーカーまたは認定サービスパートナーによる安全試験の実施を推奨します。試験方法については、DIN VDE 0701-0702「電気機器の修理、変更および試験」を参照してください。

### 17. 清掃

最適な冷却性能を維持するため、ダストフィルターを定期的に清掃してください。

清掃前には必ず電源を切断し、乾いた布のみを使用してください。液体洗剤やエアゾールは使用しないでください。

詳細は「8. メンテナンス情報」(37ページ)を参照してください。

### 18. 梱包および輸送



輸送時は、必ず純正の梱包材を使用してください。出荷時と同様の方法で梱包することで、最大限の安全性が確保されます。


### 19. 使用高度


本アンプは、海拔 2000m までの高度でのみ使用してください。








|   |  |   |   |
|---|--|---|---|
|  | <p><b>注意</b><br/>開けないでください — 感電の危険があります。</p> |  | <p>注意：本製品には高電圧がかかっています。保守・点検作業はすべて認定されたサービス担当者にお任せください。</p> |
|---|--|---|---|


|   |  |
|---|--|
|  | <p>稲妻のシンボルは、筐体内部に存在する絶縁されていない危険な電圧について、使用者に警告するものです。</p> |
|---|--|

|   |   |
|---|---|
|  | <p>感嘆符のシンボルは、本アンプに付属する資料に記載された重要な操作および保守に関する指示があることを使用者に注意喚起するものです。</p> |
|---|---|

|   |  |
|---|--|
|  | <p>警告：火災または感電の危険を避けるため、本アンプを雨や湿気にさらさないでください。</p> |
|---|--|

|   |                                   |
|---|-----------------------------------|
|  | <p>注意：開けないでください — 感電の危険があります。</p> |
|---|-----------------------------------|

|   |   |
|---|---|
|  | <p>本アンプは、海拔 2000 メートルまでの高度でのみ使用してください</p> |
|---|---|

|   |   |
|---|---|
|  | <p>本アンプは、保護接地（アース）付きの電源系統にのみ接続してください。</p> |
|---|---|



EU 適合性

EU 適合宣言

本製品は以下の EU 指令に適合しています：

電磁両立性指令（2014/30/EU）

低電圧指令（2014/35/EU）

RoHS 指令（2011/65/EU）



製造者名：CODA Audio GmbH

製造者住所：Boulevard der EU 6, 30539 ハノーファー（ドイツ）



モデル名 LINUS V Series は、以下の規格に適合しています：

CISPR 32:2015

CISPR 32:2015 + A1:2019

IEC 61000-3-2:2018 + A1:2020

IEC 62368-1:2023 日本の国家差分 J 62368-1（2023）に準拠



ユーザー情報に記載された動作条件を遵守してください。

Svetlomid Aleksandrov

EU 適合宣言

ハノーファー、2024年6月1日

本製品は、耐用年数終了後、一般廃棄物として処分せず、電気・電子機器リサイクルの回収拠点に持ち込んでください。

材料は表示に従って再利用可能です。再使用や資源回収は、環境保護に重要な貢献となります。

詳細は、お住まいの自治体の廃棄物処理窓口にお問い合わせください。



## 1. WELCOME TO CODA AUDIO

CODA Audio is a leading designer and manufacturer of high-quality pro audio loudspeaker systems.

Core to our products are a number of unique patented driver technology designs which provide outstanding dynamic results as well as improved precision and reliability over conventional components.

To ensure the highest quality and control over our products, we have our own manufacturing facility in Europe which produces all of the driver and cabinet components. Further benefits to this approach include substantial reductions in cost and quicker times to market for new products.

We have a wide product range offering high quality solutions to satisfy the most discerning and complex professional sound reinforcement applications, ranging from portable to installation to touring.

CODA Audio is represented via a global network of experienced and technically qualified international distributors. We believe that the best way to get to know us better is by listening to our loudspeakers because:

HEARING IS BELIEVING.



## 2. THE AMPLIFIER

### 2.1 Unpacking

Please unpack and inspect your new amplifier for any damage that may have occurred during transit. If damage is found, notify the transportation company immediately. Only you as the consignee may initiate a claim for shipping damage.

CODA Audio will be happy to cooperate fully as needed. Please save the shipping carton as evidence of damage for the shipper's inspection.

Even if the amplifier has arrived in perfect condition, save all packing materials for any future transport of the unit.

When shipping the LINUS V908/D amplifier, always use the original shipping carton and packing materials. For maximum protection, repack the unit as it was originally packed at the factory.

NOTE: Never ship the amplifier without the original packaging materials.

### 2.2 The amplifier

The LINUS V908/D amplifier offers a power output of:

- 1600 W peak per channel @ 4  $\Omega$  / channel
- 2200 W peak per channel @ 2.7  $\Omega$  / channel
- 3000 W peak per channel @ 2  $\Omega$  / channel
- 3200 W peak per bridged channel pair @ 8  $\Omega$
- 6000 W peak per bridged channel pair @ 4  $\Omega$

For a complete overview of rated power data please refer to chapter 5 'SPECIFICATION'.

The LINUS V908/D power amplifier is fitted with a Switched Mode Power Supply (SMPS) with PFC (Power factor Correction) for 100V - 240 V operation, which significantly reduces the weight and size (only 1U) of the amplifier. The SMPS is controlled by dual microprocessors which monitor the supply rails and the mains voltage.

The SMPS automatically regulates the supply rails according to output voltage demand. The advantage is that the heat generation is far lower than usual when the amplifier is in an idle state.

The LINUS V908/D uses a Linux operating system for controlling and monitoring the power amp. This has four main advantages over more traditional power amp systems:


- Fast network communication
- Multiple controlling protocols are available to suit external control demand by 3rd party applications
- Fast real-time controlling of parameters
- The operating system always saves its last state upon loss of power



The LINUS V908/D has been designed as an intelligent and powerful amplifier for performing specialised tasks within a complex audio system. Users can adapt the power amp to meet their specific audio requirements before use.

The high resolution 320x240 pixels full colour IPS display mounted on the front of the LINUS V908/D amplifier allows the indication of the most important information, such as status, output level, limiting, mains voltage and loaded preset.

Since there are a lot of parameters available, it is important that users familiarise themselves thoroughly with the entire range of settings and programmable features before using the power amp. If you have any questions regarding features and/or functions of your LINUS V908/D amplifier, CODA Audio will be pleased to provide you with further information. Alternatively, contact your dealer or distributor.

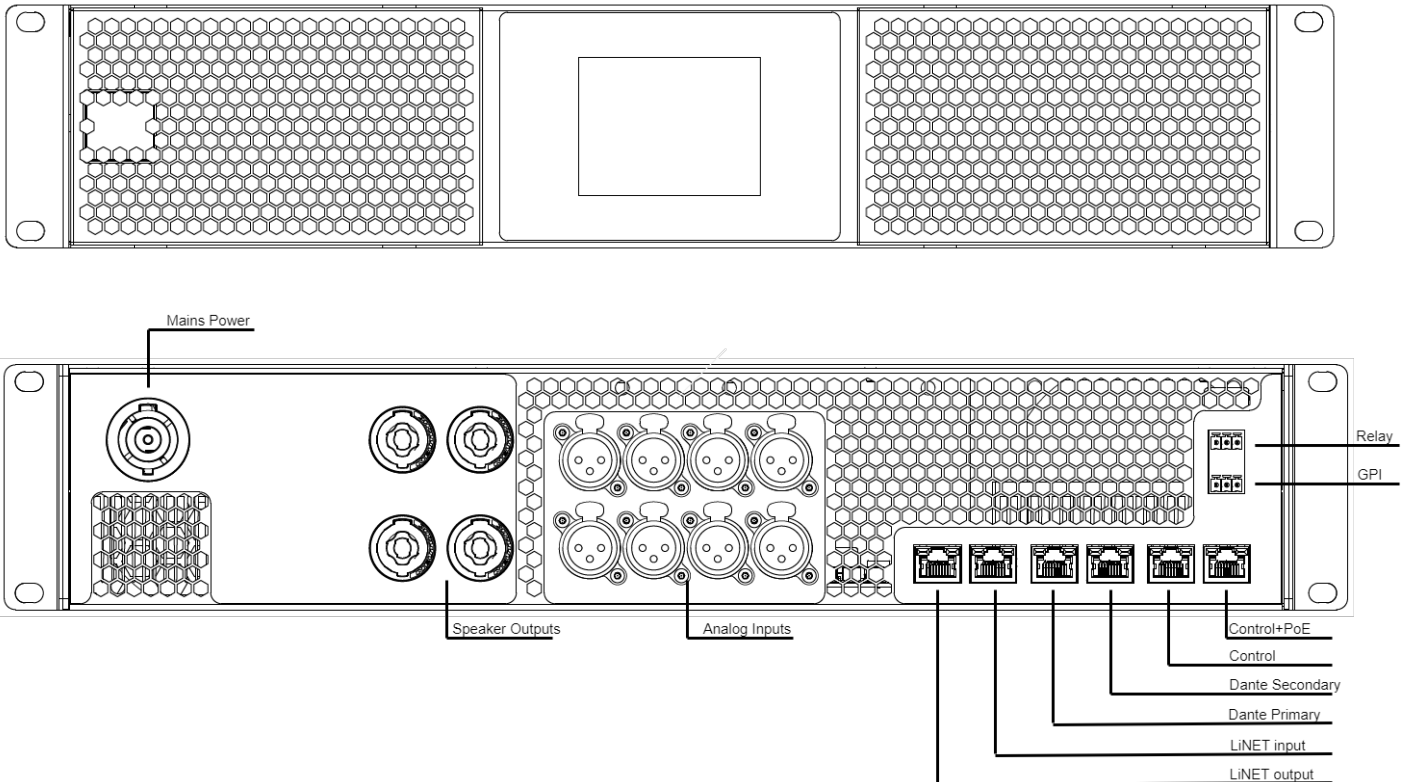




### 3. INSTALLATION

#### 3.1 Mounting

Use four screws and washers when mounting the amplifier to the front rack rails. For mobile use, the amplifier should also be secured using the 19" mounting elements on the rear panel.

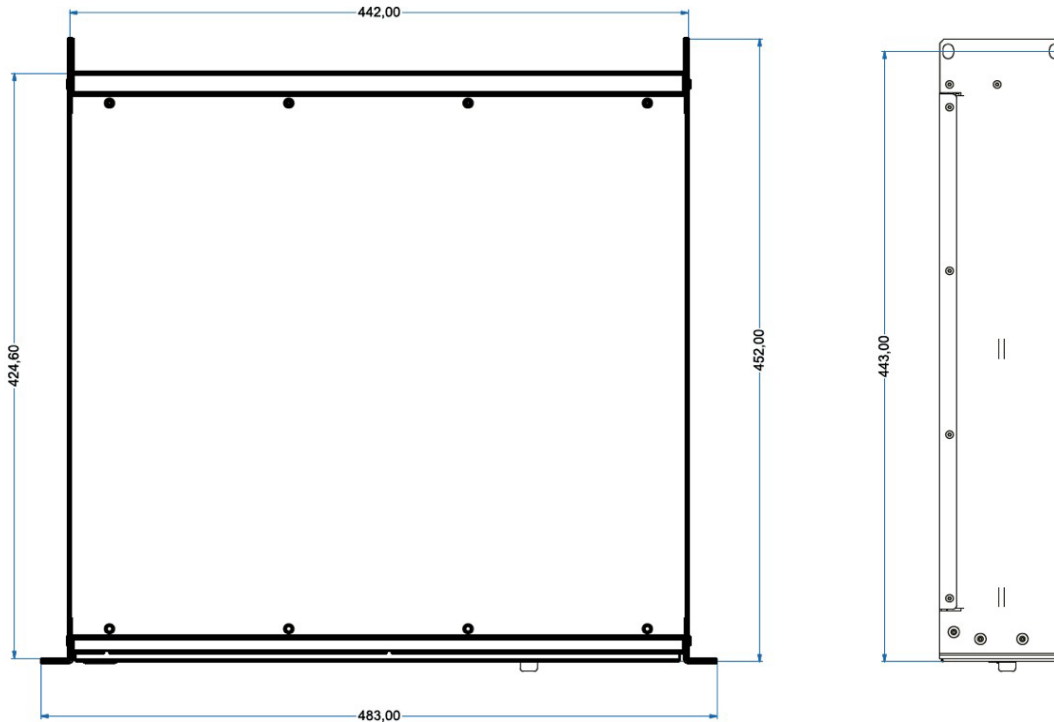

#### 3.2 Cooling

Under normal operation of the power amp, overheating should never be a problem. The air is taken in from the front and out through the back. It is of course essential that, while the power amp is running, the air is able to circulate freely. The efficiency of the cooling will depend on both the immediate environment (e.g. an enclosed rack, direct sunlight) and if the front filter is clogged. If the amp is installed in a case, the open area at the back of the case must be at least 100 cm<sup>2</sup>. This area should be in line with the amp. Always keep 1HE rack unit space open between adjacent amplifiers.

#### 3.3 Mains

##### 3.3.1 Mains supply

Only connect the LINUS V908/D amplifier to an appropriate AC circuit and outlet in accordance with the requirements indicated on the rating plate. Only use the supplied mains cable which is supplied with the amplifier for safety reasons.

CLASS 1 EQUIPMENT.  
MUST BE EARTHED.  
100-240V ~ 2000VA  
50 - 60Hz



### 3.3.2 Inrush current limitation

The LINUS V908/D SMPS uses a processor which always limits the mains inrush current. This limiter will take action under any of the following conditions:

- when connecting the amplifier to the mains through the mains cable
- when switching the amplifier on through an external mains breaker
- the mains voltage was lost (e.g. a short voltage drop).
- This limiter will confine the mains current to a value smaller than 16 Arms\*.

\*Maximum rms value of inrush current over one half-cycle of the mains voltage according to IEC/EN 55032:2016-02

(Electromagnetic compatibility of multimedia equipment - Emission requirements: German version EN 55032:2012/ AC:2013).

**NOTE:** Even under normal conditions the mains current can reach levels up to 24 A/64 A (240 V/100 V) and even higher for very short periods of time. This could cause lamps to flicker if connected to the same mains as the amplifier. The impedance of an AC circuit should be less than 0,157  $\Omega$  to avoid flicker according to EN 61000-3-11 "Electromagnetic compatibility –

Part 3-11: Limits – limitation of voltage changes, voltage fluctuations and flicker in the public low-voltage supply systems – Equipment with rated current  $\leq 75$  A and subject to conditional connection" (IEC 77A/929/CDV:2016).

If in any doubt, consult your local power provider. Never attempt to measure this impedance level with your  $\Omega$ meter. This may damage your meter and expose you to the risk of electric shock.

### 3.3.3 Mains power consumption and current draw

Due to the huge output power of the LINUS V908/V908D, the mains current draw can get very high when demanding large output powers. Please refer to following table for an overview of mains currents and power consumption under different operating conditions.

| Operating condition                  | Mains current (4 $\Omega$ ) | Power consumption (4 $\Omega$ ) | Output power (4 $\Omega$ ) |
|--------------------------------------|-----------------------------|---------------------------------|----------------------------|
| Amplifier standby (output stage off) | 0.20 A                      | 8 W                             | 0 W                        |
| Idle (power on)                      | 0.60 A                      | 38 W                            | 0 W                        |
| 100 W per channel / 1/8th            | 4.60 A                      | 1000 W                          | 800 W                      |
| 200 W per channel / 1/4th            | 8.60 A                      | 2000 W                          | 1600 W                     |
| 250 W per channel / 1/3rd            | 12.20 A                     | 2400 W                          | 2000 W                     |



Mains current draw and power consumption @ 230 V, 50 Hz.

Measured with pink noise with crest factor of 12 dB to present typical music signal. For 115 V mains operation, the current values can be multiplied by 2.

Please note that the values given here are typical values only, measured on a standard 230 V/50 Hz outlet. The actual mains current draw can vary depending on the music signal and the mains characteristics (especially the mains impedance) of any specific installation.

### 3.4 Signal inputs

The LINUS V908/D amplifier offers three different input signal sources:

Analog

In this mode the analog signals connected to the XLR input connectors will be used as input signal.

LiNET

With the LiNET setting the input signals are taken from the LiNET Digital Audio interface.

DANTE

With the DANTE setting the input signals are taken from the DANTE Digital Audio Interface.

#### 3.4.1 Analog input


XLR:

Pin 1 = Ground (chassis/earth)

Pin 2 = Hot (in polarity, "+")


Pin 3 = Cold (out of polarity, "-")

Always use symmetrically (balanced) shielded cable to connect the amplifier.

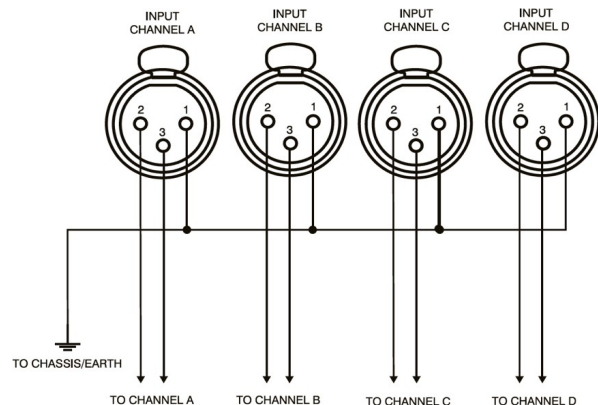

#### 3.4.2 LiNET AES/EBU input/output

Eight audio channels are arranged in four AES/EBU pairs. The AES/EBU input and output connectors allow you to receive and send multichannel digital audio streams to other AES/EBU-compatible devices (like other LINUS V908/D amplifiers for example). Please note that although the AES/EBU and Ethernet connectors use the same connector type (RJ45), the physical transmission protocols are different. So, any direct connection between the AES/EBU connectors and standard Ethernet connectors will not work

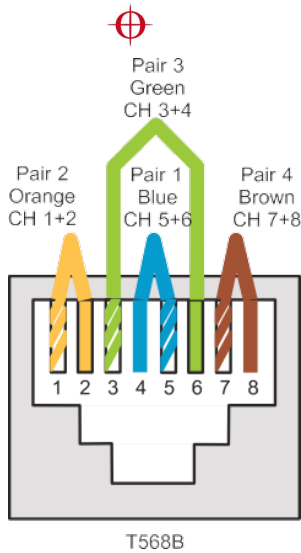

| LiNET AES/EBU RJ45 |              | pin wiring         |
|--------------------|--------------|--------------------|
| RJ45-Pin           | Color        | Channel (polarity) |
| 1                  | orange-white | 1/2 (+)            |
| 2                  | orange       | 1/2 (-)            |
| 3                  | green-white  | 3/4 (+)            |
| 4                  | blue         | 5/6 (-)            |
| 5                  | blue-white   | 5/6 (+)            |
| 6                  | green        | 3/4 (-)            |
| 7                  | brown-white  | 7/8 (+)            |
| 8                  | brown        | 7/8 (-)            |

### 3.4.3 DANTE

The DANTE Primary / Secondary connector (LINUS V908D only) allows you to receive unicast or multicast digital audio streams from any DANTE enabled transmitter. Please note, that LINUS devices are only receivers and therefore third-party software and hardware is needed to build a DANTE network. For further information regarding DANTE please visit [www.audinate.com](http://www.audinate.com).

### 3.5 Remote control inputs (Ethernet / PoE)

The Ethernet link network connector allows you to access the LINUS V908/D from a host computer for remote control, firmware update and downloading DSP presets. Please note that for setting up proper network connection you need to use the CODA Audio LINUS Control software.

The ethernet link supports PoE (Power over Ethernet) IEEE 802.3af (15.4W). Feeding PoE power to the control port of Linus V908 will keep operating the control and dsp section of the Linus V908 in case of losing mains power. After the mains power comes back online withing range, it will take only 3 seconds until the amplifier outputs audio again.

### 3.6 Power outputs





#### 3.6.1 Speakon Connection

In normal mode, the Speakon connector pinout follows the standard layout. In case a Bridged preset is chosen, 2 channels are used together to become 1 higher powered channel. In this case the speakon connection has to follow a alternative connection as in the table below.



In Normal mode, the pin configuration of the Speakon connectors is as follows:





|                      |         |                       |
|----------------------|---------|-----------------------|
| SPEAKON®<br>Output 1 | Pin 1 + | Channel 1 amplifier + |
|                      | Pin 1 - | Channel 1 amplifier - |
|                      | Pin 2 + | Channel 2 amplifier + |
|                      | Pin 2 - | Channel 2 amplifier - |
| SPEAKON®<br>Output 2 | Pin 1 + | Channel 3 amplifier + |
|                      | Pin 1 - | Channel 3 amplifier - |
|                      | Pin 2 + | Channel 4 amplifier + |
|                      | Pin 2 - | Channel 4 amplifier - |
| SPEAKON®<br>Output 3 | Pin 1 + | Channel 5 amplifier + |
|                      | Pin 1 - | Channel 5 amplifier - |
|                      | Pin 2 + | Channel 6 amplifier + |
|                      | Pin 2 - | Channel 6 amplifier - |
| SPEAKON®<br>Output 4 | Pin 1 + | Channel 7 amplifier + |
|                      | Pin 1 - | Channel 7 amplifier - |
|                      | Pin 2 + | Channel 8 amplifier + |
|                      | Pin 2 - | Channel 8 amplifier - |

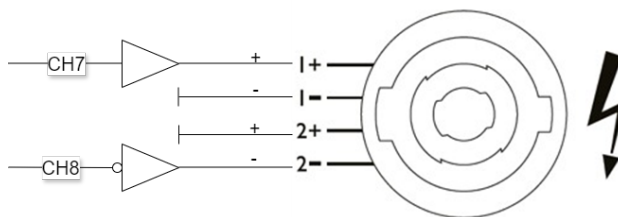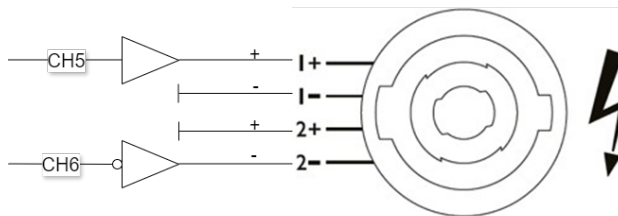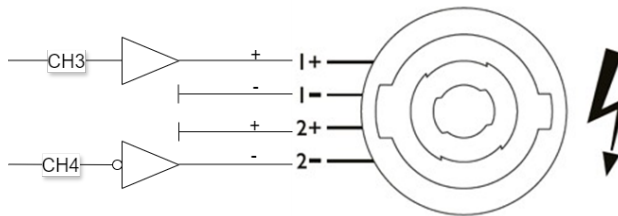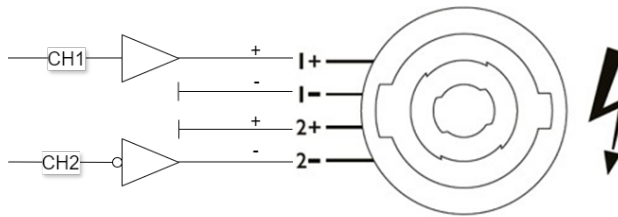



In Bridged mode, the pin configuration of the Speakon connectors is as follows:

|                      |         |                       |
|----------------------|---------|-----------------------|
| SPEAKON®<br>Output 1 | Pin 1 + | Channel 1 amplifier + |
|                      | Pin 1 - | Unused                |
|                      | Pin 2 + | Unused                |
|                      | Pin 2 - | Channel 1 amplifier - |
| SPEAKON®<br>Output 2 | Pin 1 + | Channel 3 amplifier + |
|                      | Pin 1 - | Unused                |
|                      | Pin 2 + | Unused                |
|                      | Pin 2 - | Channel 3 amplifier - |
| SPEAKON®<br>Output 3 | Pin 1 + | Channel 5 amplifier + |
|                      | Pin 1 - | Unused                |
|                      | Pin 2 + | Unused                |
|                      | Pin 2 - | Channel 5 amplifier - |
| SPEAKON®<br>Output 4 | Pin 1 + | Channel 7 amplifier + |
|                      | Pin 1 - | Unused                |
|                      | Pin 2 + | Unused                |
|                      | Pin 2 - | Channel 7 amplifier - |

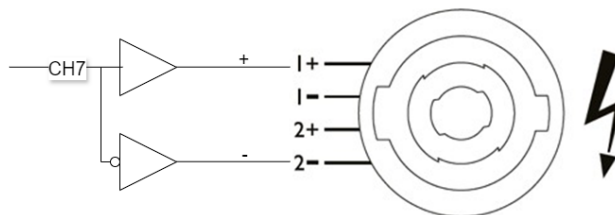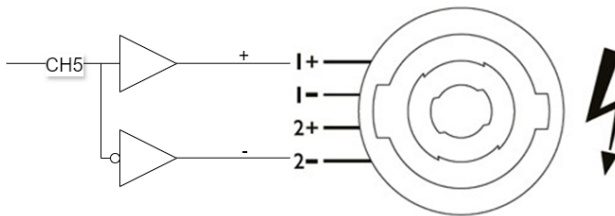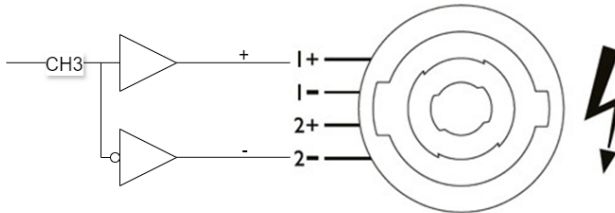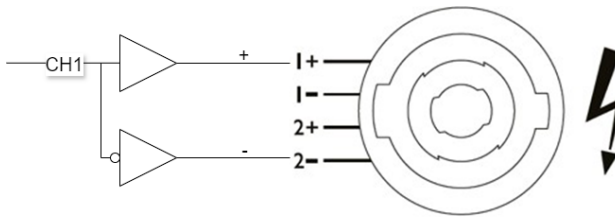

**WARNING!**

The output connectors are marked with the lightning flashes indicate high voltages that are potentially life threatening. Wiring to these terminals requires installation by an instructed person or the use of ready-made leads or cords.

Custom wiring should only be carried out by qualified personnel.

To prevent electric shock, do not operate the amplifier with any of the conductor portion of the speaker wire exposed.

**NOTE:** For reasons of safety and performance do only use high-quality fully insulated speaker cables of stranded copper wire. Use the largest wire size that is economically and physically practical. Make sure that the cables are not longer than necessary. Always terminate the speaker wires with crimped wire ferrules for the correct cable size.

### 3.7 GPI Remote control

Phoenix 1803581 (MC 1,5/ 3-ST-3,81):

Pin 1 = Common

Pin 2 = GPI1 (5-24V to activate, unipolar) - Default function = Mute ALL ON upgoing, Mute ALL OFF downgoing

Pin 3 = GPI2 (5-24V to activate, unipolar) - Default function = Standby ON upgoing, Standby OFF downgoing



### 3.8 Relay Remote control

Phoenix 1803581 (MC 1,5/ 3-ST-3,81):

Pin 1 = Common

Pin 2 = Normally Open - Default function = Contact closes when amplifier stage is running OK

Pin 3 = Normally Closed - Default function = Contact opens when amplifier stage is running OK





## 4. OPERATION


### 4.1 Front panel user interface

The front panel user interface of the Linus V Series is a display of 320x240 pixel full colour IPS LCD with a wide viewing angle in conjunction with a touch interface. Use the top-back of your fingernail for best touch behaviour.

#### 4.1.1 Home page

The home page has 4 main parts for navigation, amplifier menu/status, speaker menu/status, power menu, mutes

The amplifier/status section shows amplifier related information. The speaker/status section shows the relevant audio related status.

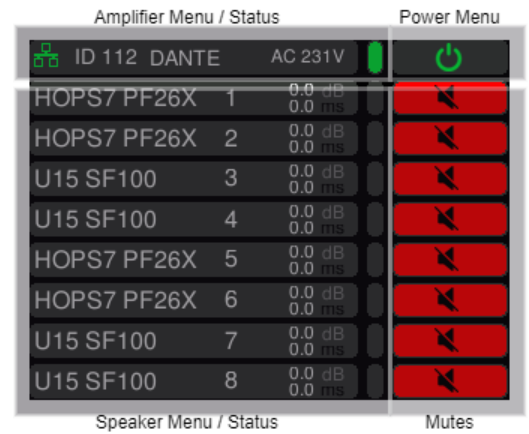

#### 4.1.2 Network status

The network icon on the left top of the display indicates if external control is active.

White indicates the amplifier is not being controlled over network.

Green indicates the amplifier is being controlled over the network. In this case the frontpanel menu is locked and only the mute buttons will function

The network ID is shown next to the network icon.



#### 4.1.3 Status indicators

Each amplifier channel has an output level indicator.

The colour of each indicator can be green, yellow or red.

Green: Signal present

Orange: there is moderate gain reduction (limiting)

Red: there is significant gain reduction (limiting)

The indicator on the most top indicates the status of the power supply. The colour can be green or red.

Green: Amplifier operating normally


Red: Amplifier power stage/ power supply is not operating.






4.1.4 Amplifier Menu


This menu hosts the settings for the amplifier system settings.

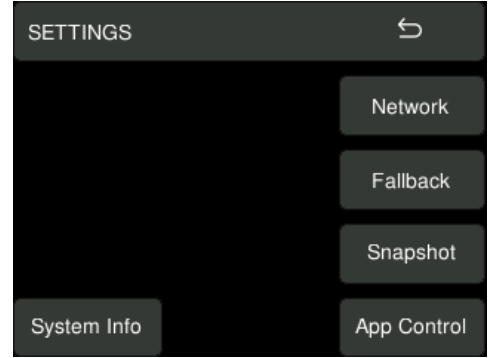


Network ID settings. Navigate with the + and – buttons to change the ID, press “CONFIRM” to apply the settings. Pressing the “BACK” button will exit this menu without changing the settings

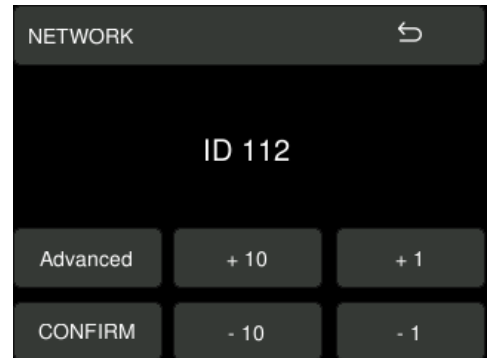

Network Advanced. The network range can and subnet mask can be changed to match the network infrastructure. Press the field to edit and use the + and – buttons, press “CONFIRM” to apply the settings. Pressing the “BACK” button will exit this menu without changing the settings

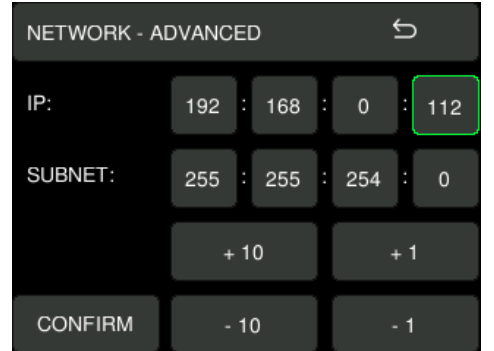


Snapshot: The snapshots store all the audio settings currently applied in the amplifier. First select a slot and use “LOAD” to recall a snapshot, “STORE” to save the current setting in a snapshot.

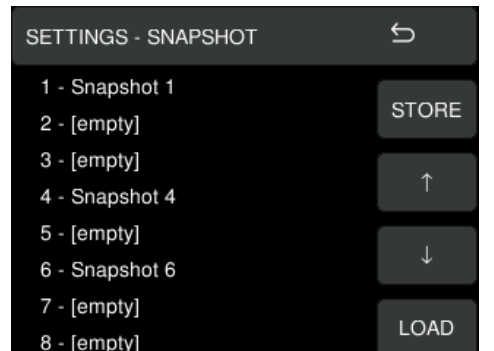




Fallback menu: In case a digital source is selected (LiNET/Dante), a fallback mechanism can be enabled to fall-back to a analog source in case the digital lock or Dante transmitter is lost.

“AUTO” The amplifier will reset the channels back to their digital source in case the digital source becomes active again after a fallback has occurred after 3 seconds

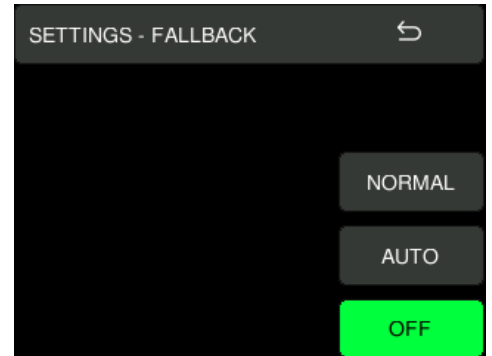


“NORMAL” Requires a manual action to reset the channels back to their digital source in case the digital source becomes active again.

A button “RECOVER” will appear in the amplifier settings menu

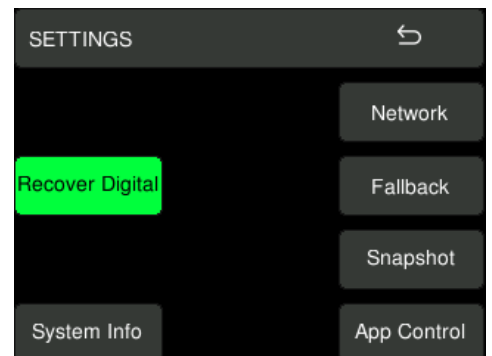

App menu: enables the internal WiFi hotspot which can be used in conjunction with the Mobile App, see App section.

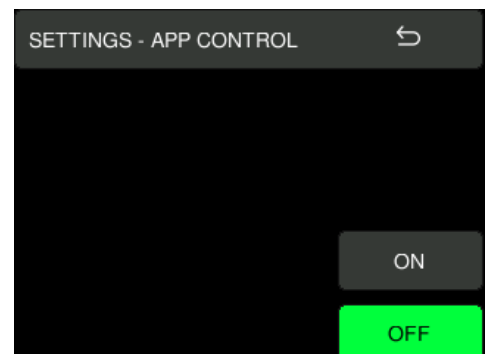




4.1.5 Power menu

Power On: Turns off standby mode in case the amplifier is in standby mode.

Mute All: A shortcut to mute all outputs

Unmute All: A shortcut to unmute all outputs

Standby: Turns the amplifier in standby mode. This will turn the amplifier stages off

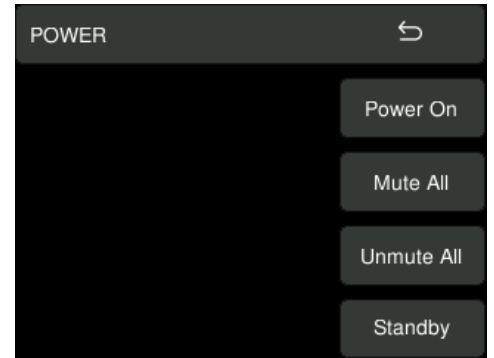


The homepage shows standby mode is turned on

| ID          | NAME  | STATUS           | AC 232V | POWER |
|-------------|-------|------------------|---------|-------|
| 112         | DANTE |                  |         |       |
| HOPS7 PF26X | 1     | 0.0 dB<br>0.0 mS |         |       |
| HOPS7 PF26X | 2     | 0.0 dB<br>0.0 mS |         |       |
| U15 SF100   | 3     | 0.0 dB<br>0.0 mS |         |       |
| U15 SF100   | 4     | 0.0 dB<br>0.0 mS |         |       |
| HOPS7 PF26X | 5     | 0.0 dB<br>0.0 mS |         |       |
| HOPS7 PF26X | 6     | 0.0 dB<br>0.0 mS |         |       |
| U15 SF100   | 7     | 0.0 dB<br>0.0 mS |         |       |
| U15 SF100   | 8     | 0.0 dB<br>0.0 mS |         |       |



#### 4.1.6 Speaker Menu

The left side shows the selected channel on which settings will be applied to. This selection stays visible through all submenu's and can be changed anywhere in the submenu's which enables fast changing settings on different channels.

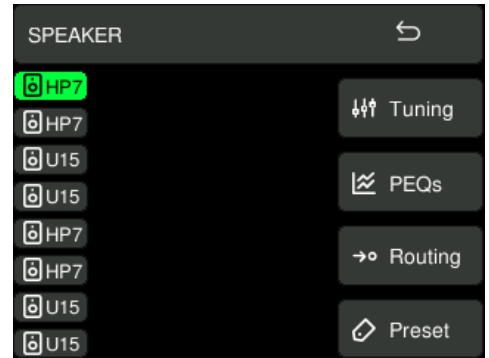


#### 4.1.7 Speaker menu - Tuning


The tuning menu shows a overview of tunings for the selected channel.

The round buttons enable/disable the tuning.

Note: some tunings might not be available depending on the speakertype. The gain button will only turn green if a gain other than 0dB has been set.

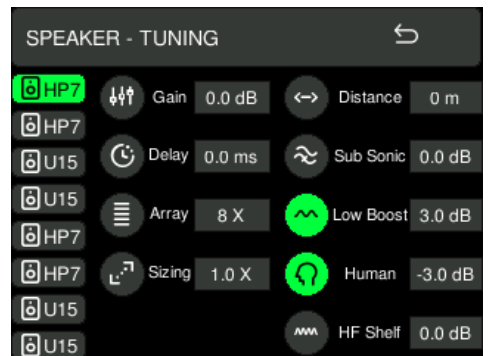


To change a value, tap the value field to show the expanded view.

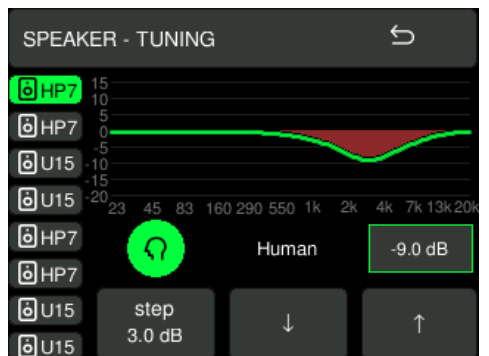

#### 4.1.8 Speaker menu - PEQs


The PEQ menu shows a overview of PEQ filter settings for the selected channel.

The round buttons enable/disable the tuning.

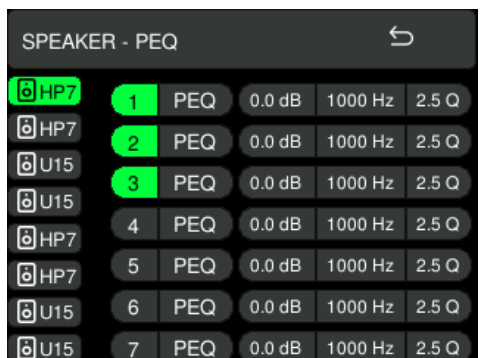



To change a value, tap the value field to show the expanded view.

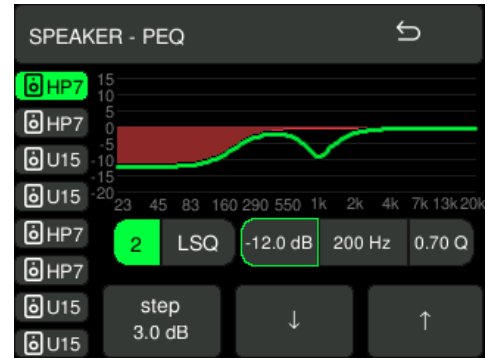


Note: The green curve shows the total curve of all Tunings/PEQs, the red curve shows the selected filter being edited.

#### 4.1.9 Speaker menu - Routing


The routing menu shows a overview of signal source routings feeding the selected channel.

The round buttons enable/disable the routing source.

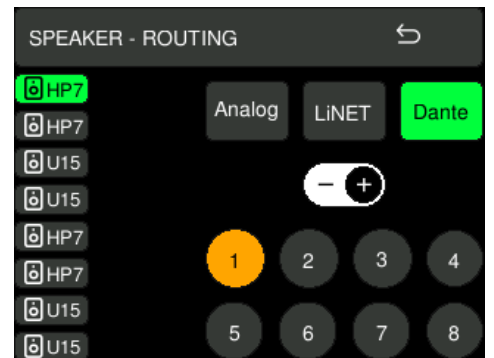

The + and – button controls the polarity of the input source.

White is normal polarity, Red is inverted polarity

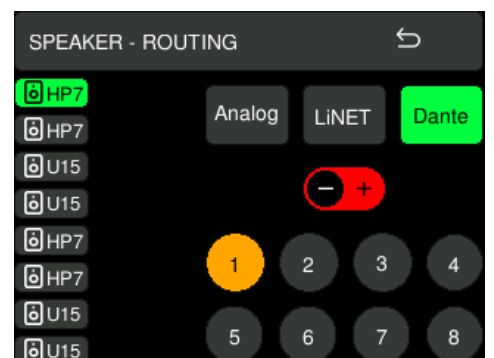

Note: Analog/LiNET/DANTE will set all channels in the selected source mode.



4.1.10 Speaker menu - Preset

The preset menu loads a speakertype on the selected channel

First select a speaker series.





Select a speakertype

Select the speakermode

If the speakermode is selected, tap "LOAD"

An overview is shown which speaker will be loaded to the selected channel.

Note: All Tunings/PEQs will be reset to default upon "CONFIRM"

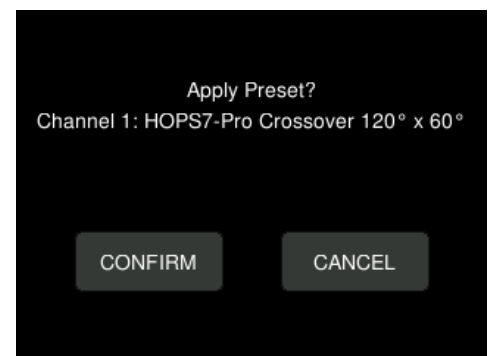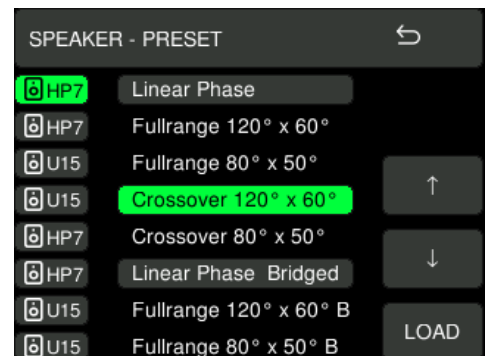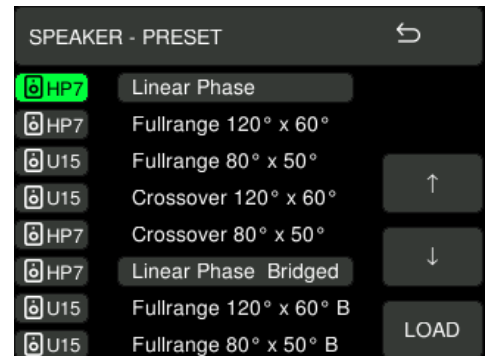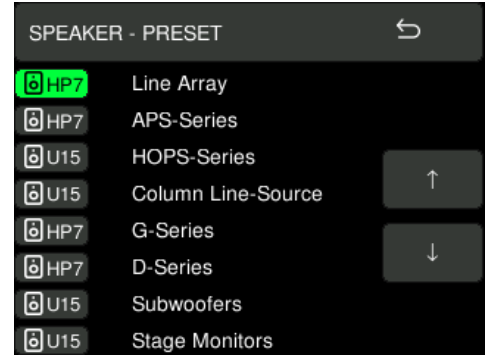



#### 4.1.11 Power over Ethernet (PoE)

If the amplifier's first ethernet control port is connected to a PoE network switch, the amplifier will stay operating with the power stage turned off in case the mains power is removed. All internal systems stay operational. In case mains power is re-applied, the output stages will switch on within 3 seconds.

#### 4.1.12 Fault indications

Fault indications will be shown on the top of the home page. Possible errors are:

DCERROR indicates a DC was present on the output terminals. A reboot is required to clear this error. In case this error comes back after a reboot (remove all power for 15 seconds) there is a internal fault

AVGLIMIT indicates the average power limit has been reached, this will never be active with normal music signals.



## 4.2 App control

### 4.2.1 Connecting to the amp

#### Activating WiFi

The LINUS V908 App requires the integrated WiFi hotspot of the LINUS V908 amplifier to be active. To enable WiFi, please press and hold the Mute button on the frontpanel of the amplifier. This will display a QR-Code which you can scan with your mobile device's camera to automatically connect to the amplifier's WiFi network.

#### Installing the App

Once connected to the amplifier's WiFi network, please open the web browser on your mobile device and enter the IP address **172.24.0.1**. You will be prompted with a login page. At this point, you can install the LINUS V908 App on your device. On Apple devices, this can be done by clicking the "Share" button and scrolling down to select the option "Add to Home Screen". You can choose a name for the App and need to click "Add" in the top right corner afterwards. Now there should be an App with the CODA logo installed on your Home Screen.

#### Login

Once you are connected to the amplifier's WiFi and have opened the App, you will be prompted with a login screen. Click login to start controlling the amplifier.

#### Warning

Like the Frontpanel Menu on CODA's other amplifiers, the LINUS6.4 App can not be used at the same time as LINUS Control. There has to be only one Control instance (either the App or LINUS Control) modifying the state of the amplifier at any given time. Otherwise changes made in LINUS Control will not be reflected in LINUS Control and vice versa, putting the device in a torn state that matches neither the App nor LINUS Control.


To ensure that only one Control instance is connected, the amplifier will disconnect the App and its WiFi hotspot once LINUS Control is connected to it. After LINUS Control is disconnected, the WiFi hotspot can be enabled and the App can be connected again.



## 4.2.2 Tabs


### Speakers Tab

In the Speakers Tab, you can load speaker presets without connecting to LINUS Control. Clicking a channel opens the Preset list, containing all speaker presets that are currently supported for LINUS V908. At the top of the Preset list, you can switch between Single-Ended (“Normal”) and Bridge Presets. Bridged channel pairs are displayed as one channel in the Speakers Tab (e.g.: “1+2”).

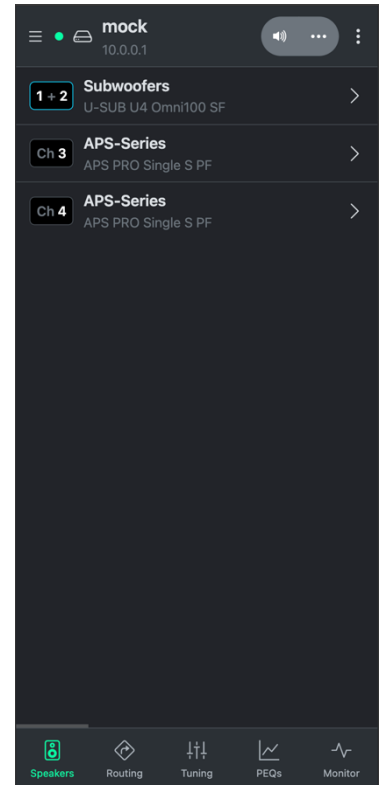

### Routing Tab

The Routing Tab offers the same input routing options that can be found in LINUS Control. At the top, you can switch between Analog and Digital inputs. To the right of each line in the Routing Matrix, there is a polarity invert switch for that amplifier output. If LiNET is selected as input signal type, the Analog Fallback Routing list appears below the Routing Matrix.

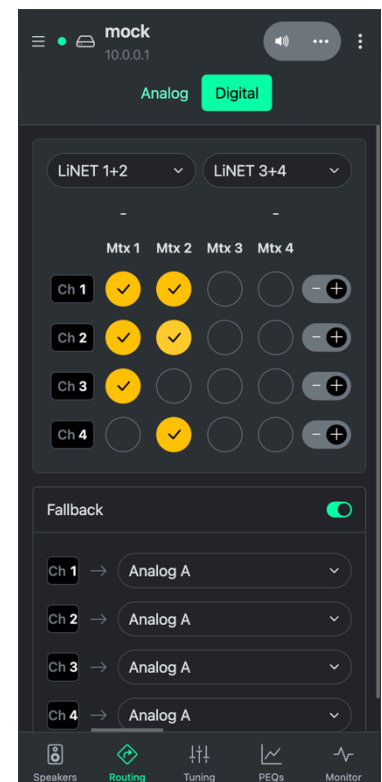



Tuning Tab

In the Tuning Tab, you will find the same Tuning Tools as in LINUS Control. Click on the abbreviated loudspeaker name at the top of the Tuning Tab to select that channel for tuning. To apply the same tuning parameters to multiple channels, channels can be grouped at the top of the page.



Clicking on the button right of the channel selection buttons will open the Grouping dialog.

Here you can link multiple amplifier channels (columns) to one virtual Tuning Group (rows). The same Grouping logic applies to the PEQs Tab.

Pressing the unit behind a tuning value and dragging up or down opens a slider which can be used as an alternative way of adjusting tuning parameters.

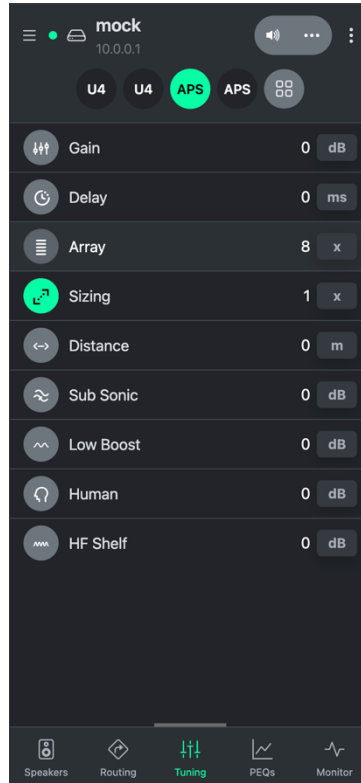


Figure 1: Tuning-Tab

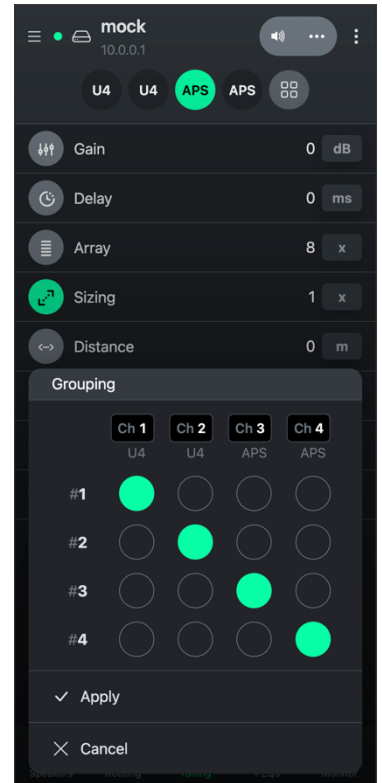


Figure 2: Grouping dialog

PEQs Tab

The PEQs Tab offers 7 additional parametric equalisers for each output channel. A PEQ is enabled if its number is highlighted in green. The filter type can be set to either Bell, High-Shelf or Low-Shelf. A PEQ can be adjusted by clicking its row in the PEQ list.

This will open a window with parameters for filter type, gain, cutoff frequency and bandwidth. The Grouping logic in the PEQs Tab works the same as, and is mirrored in the Tuning Tab.

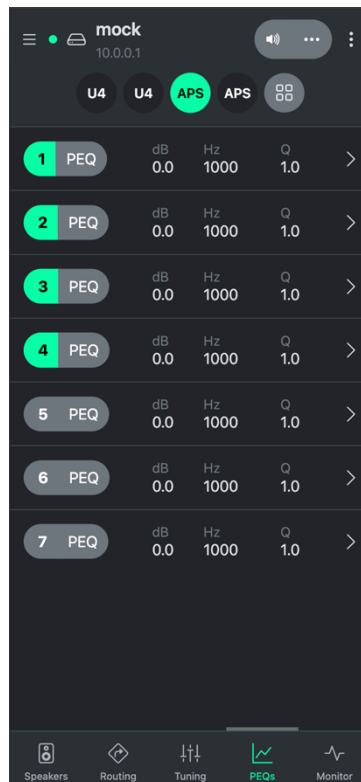


Figure 4: PEQs Tab


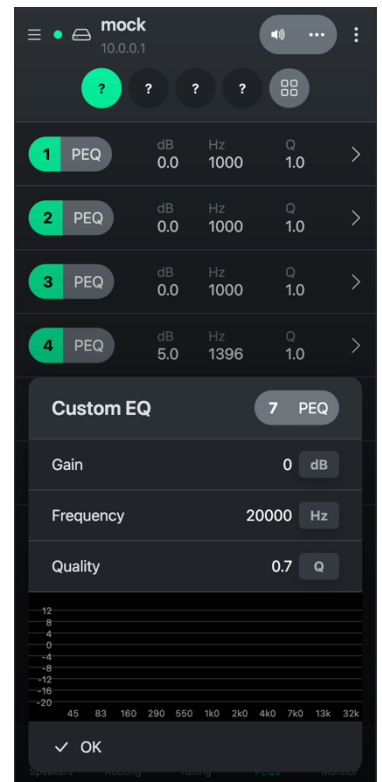


Figure 5: EQ parameter dialog



### Monitor Tab


The Monitor Tab shows Input and Output signal levels of the individual amplifier channels. Bridged channel pairs are displayed as one output ("1+2" for example). Click a channels to open a more detailed meter view.

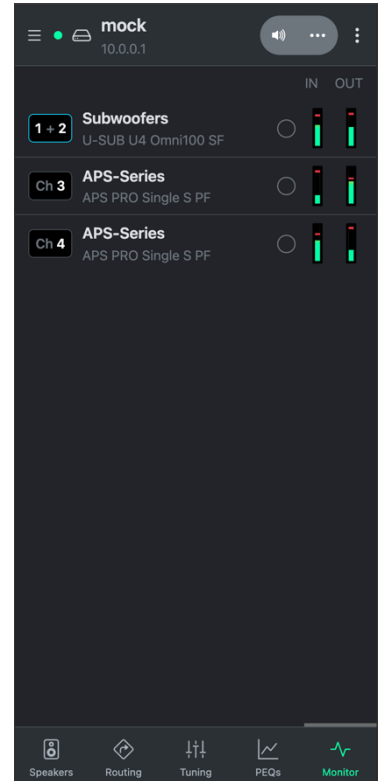

### 4.2.3 App-Menu

#### App Menu


The button (three horizontal lines) in the top left of the App's user interface opens the App menu. If the App ever gets disconnected from the amplifier for whatever reason, please click the "Reload App" button. This will reconnect to the amplifier and refresh the current state.

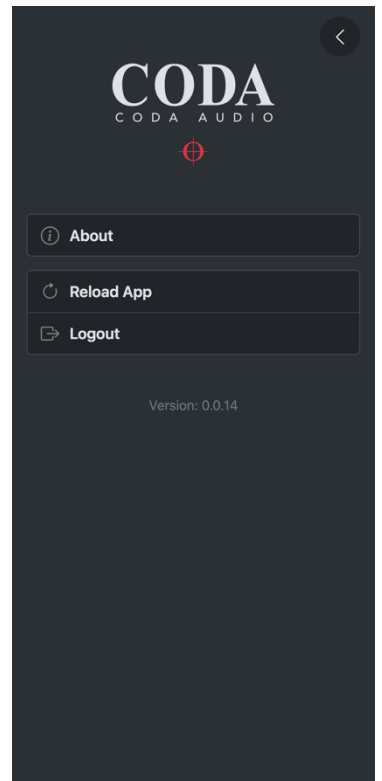




Device Menu

The three vertical dots in the top right of the App’s user interface open the Device menu. Here you can access additional functionality: “Identify Device” will flash the display of the amplifier, so you can verify that you are connected to the correct unit (same as Identify button in LINUS Control). “Shutdown Device” puts the amp into Standby (same as Power button on Amps page in LINUS Control).

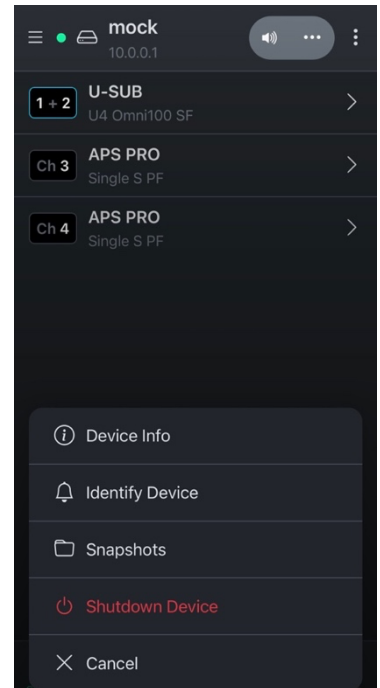


Device Info

The Device Info page shows device specific information like hardware & firmware version, speaker library version, serial number, etc. It also shows the IP address and subnet mask the amplifier currently has configured on its Ethernet Control port (not on the WiFi network that the App uses).

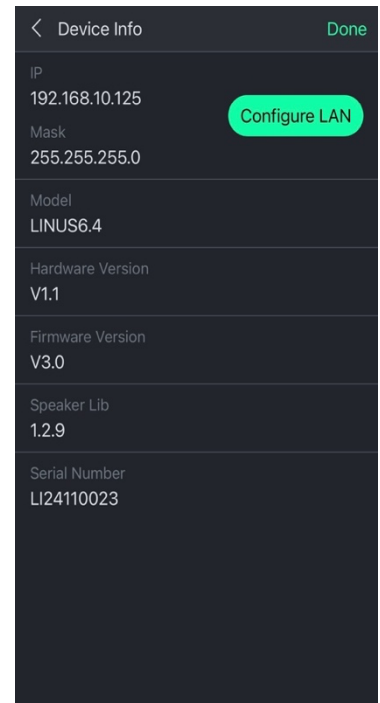



Click the “Configure LAN” button to set a new static IP address or subnet mask for LINUS Control to connect to. Click Apply after making changes in the “Configure LAN” dialog.


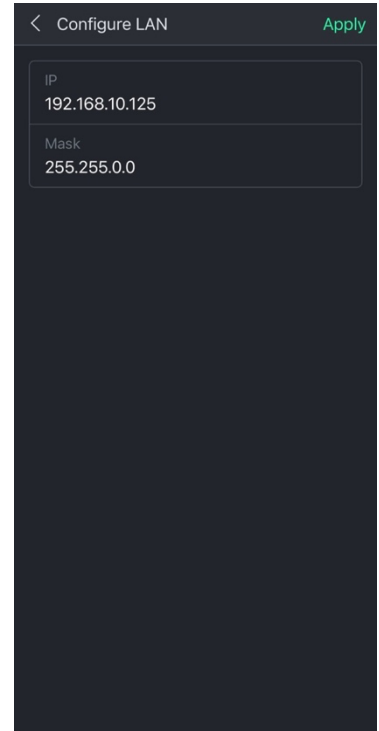


### Snapshots

The LINUS V908 App can recall Snapshots that have been saved on the amplifier by LINUS Control or save and recall new Snapshots without connecting to LINUS Control.

There are 20 Snapshot slots available on LINUS V908, which are empty by default. After selecting one of the slots, a dialog with the options “Load snapshot” and “Save snapshot” opens.

After selecting “Save snapshot”, a name for the new Snapshot can be entered, and confirmed by clicking “Save snapshot”.

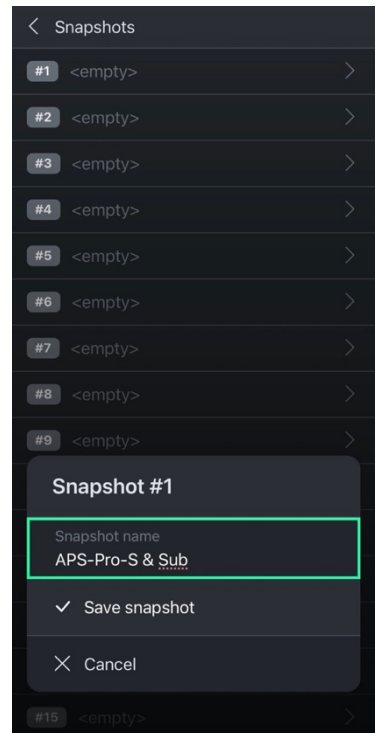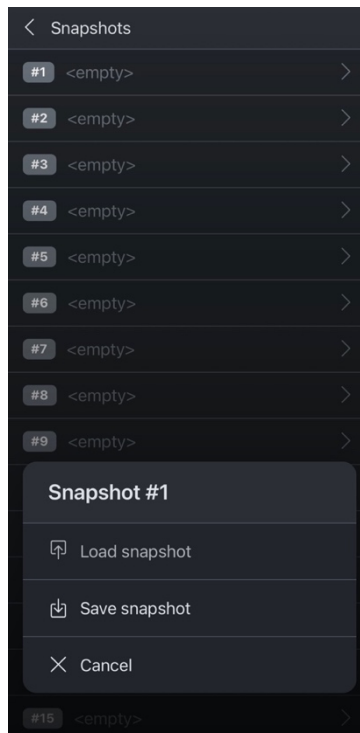



#### 4.4 Mains protection

##### 4.4.1 Inrush current limitation

Within one second of the LINUS V908/D amplifiers being connected to the mains, the mains current limiter will charge the capacitors in a controlled way, limiting the maximum mains current during startup. This current is never higher than the maximum peak current in operation.

##### 4.4.2 Mains overvoltage detection

The mains voltage is continuously monitored by the SMPS. If the mains input voltage exceeds 265 V, the main power supply switches off. It will switch on again after the voltage is back within specified range

#### 4.5 Main SMPS protection

##### 4.5.1 Overcurrent protection

The main SMPS (Switched Mode Power Supply) transformer current of your LINUS V908/D amplifier is continuously monitored. If overcurrent occurs, the main SMPS will limit the current. Should there be an internal failure, this feature prevents other parts from being damaged.

##### 4.5.2 Overload protection

The output stage is permanently monitored for possible overload situations. There are varying limiting levels of the look-forward overload protection depending on connected output load. These limits will be set automatically from a load measurement on each output channel. This improves reliability without degrading sound quality when driving complex loads. In case of extremely high output levels with heavily clipped output signals and low loudspeaker impedances  $< 2 \Omega$  or  $< 4 \Omega$  in bridge mode, this additional protection will reduce the amplifier stage output power very quickly.

In normal operation (no limiting) this protection should never be activated.

##### 4.5.3 Thermal protection

The temperature of the main SMPS transformer of your LINUS V908/D amplifier is permanently monitored. If the temperature exceeds  $70^\circ \text{C} / 158^\circ \text{F}$ , a thermal limiter will act on the total system power and avoid a SMPS shutdown.

#### 4.6 Fans

The fans mounted in your LINUS V908/D amplifier operate permanently, but as long as the temperature remains below  $40^\circ \text{C} / 104^\circ \text{F}$ , they will run at their slowest speed. The highest detected temperature from the heatsinks of each channel and SMPS controls the speed of the fans. Above  $40^\circ \text{C} / 104^\circ \text{F}$  the speed is increased until it reaches its maximum value.



## 5. SPECIFICATION

### GENERAL

|  |  |
|--|--|
| Number of output channels                                      | 8  |
| Output stage   | Class D-IC   |
| Internal sample rate / bit-depth                               | 48 kHz/64 bit  |
| Signal-to-noise ratio<br>(22 Hz - 20 kHz, 4 Ω - analog input)  | > 105 dB (unweighted)<br>> 108 dB (A-weighted)   |
| Signal-to-noise ratio<br>(22 Hz - 20 kHz, 4 Ω - digital input) | > 113 dB (unweighted)<br>> 116 dB (A-weighted)   |
| Frequency response<br>(8 Ω load with CLEAR preset)             | 20 Hz – 20 kHz = (+0.3 dB/-0.2 dB)   |
| THD+N & IMD<br>(4 Ω load @ 1/2 output power)                   | 20 Hz – 20 kHz = < 0.05%   |
| Latency<br>(input to loudspeaker output)                       | Minimum 2.70 ms AES/EBU input<br>Minimum 2.00 ms Analog input                                  |
| Protection circuits  | Inrush current limiter<br>Thermal limiter<br>Output DC<br>SMPS over-current<br>Output overload |
| Indicators   | Mute Status<br>Limit<br>Signal<br>Protection<br>Ethernet control<br>Power on                   |
| Ethernet connection  | 2 x 100 Mbps RJ45 Control<br>2 x 1000 Mbps RJ45 Dante™   |



**AC MAINS**

|   |  |
|---|--|
| AC mains input connector  | PowerCon 32A   |
| AC mains voltage (nominal)**  | 100V – 240V AC   |
| AC mains voltage (maximum)**  | 90V - 264V AC  |
| AC mains frequency  | 50 – 60 Hz   |
| Power consumption*<br>(1/4 power = 200 W @ 4Ω<br>to represent typical music signal) | Amplifier in standby = 8 W Amplifier idle = 38 W<br>Amplifier ¼ power = 2000 W |



**INPUT**

|   |  |
|---|--|
| Input sources                                     | Analog & LiNET & DANTE™  |
| Analog input impedance (balanced)                 | 44 kΩ  |
| Maximum input level (analog differential)         | +21 dBu / 8.7 Vrms   |
| Input connections                                 | 8 x XLR 3-Pin Analog<br>1 x RJ45 LINET IN (8 x CH)<br>1 x RJ45 LINET LINK (8 x CH)<br>2 x RJ45 DANTE IN (8 x CH) |
| Supported digital input formats<br>(Internal SRC) | 44.1 kHz / 48 kHz / 88.2 kHz /<br>96 kHz / 17V908 kHz / 192 kHz  |

**OUTPUT**

|  |  |
|--|--|
| RMS output power*<br>(20 Hz - 20 kHz, THD < 0.01%)<br>(all channels driven, 12dB crest factor) | 500 W @ 8 Ω<br>800 W @ 4 Ω<br>1500 W @ 2 Ω<br>1600 W @ 8 Ω bridged<br>3000 W @ 4 Ω bridged (2ch BTL, 2ch SE)   |
| Peak output power*<br>(20 Hz - 20 kHz, 12 dB Crest Factor)<br>(all channels driven)            | 1000 W @ 8 Ω<br>1600 W @ 4 Ω<br>3000 W @ 2 Ω<br>3200 W @ 8 Ω bridged<br>6000 W @ 4 Ω bridged (2ch BTL, 2ch SE) |
| Maximum output voltage*  | +/- 90 V pk SE normal mode<br>+/- 180 V pk BTL bridge mode   |
| Maximum output current*  | +/- 50 A pk  |
| Damping factor<br>(8 Ω load, 1 kHz and below)  | > 2500   |
| Minimum output load  | 2 Ω per channel in normal mode<br>4 Ω in bridged mode  |
| Power output connections   | 4x Speakon 4-Pole  |



**THERMAL**

|                        |   |
|------------------------|---|
| Operating temperature  | +5° C to +55° C 41° F to 131° F                             |
| Thermal output (BTU/h) | 170.6 = Idle<br>1400 = 20%<br>3242 = 50%<br>6312 = 100%     |
| Thermal output (kWh)   | 0.05 = Idle<br>0.41 = 20%<br>0.95 = 50%<br>1.85 = 100%      |
| Cooling                | 2 x thermally controlled fans.<br>Hot air expelled at rear. |

**PHYSICAL**


|                                 |  |
|---------------------------------|--|
| Dimensions (W x H x D)          | 483.5x88x454mm / 19"x3.4"x17.8" (2U) (size including back mounting ears) |
| Shipping dimensions (W x H x D) | 675x130x560 mm / 26.5x5.1x22"  |
| Net weight                      | 12.0 kg   26.5 lbs   |
| Shipping weight                 | 14.75 kg / 23.5 lbs.   |

\* Typical values – some variation may exist due to component tolerances.


\*\* Voltage range should not be exceeded. Amplifier output power performance will degrade below nominal voltage.




6. PERFORMANCE

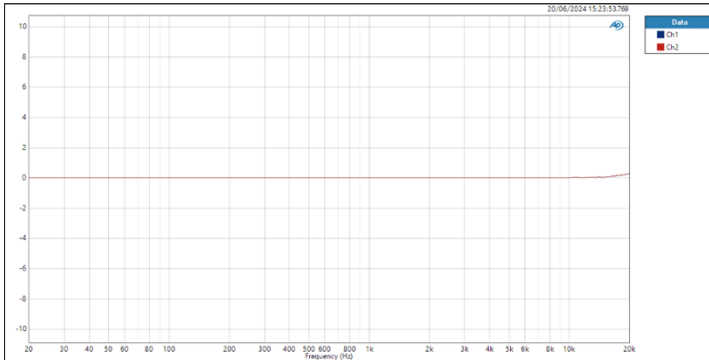


**Figure 6.1**  
FR w/AES17-filter @8Vrms, 4 Ω  
(measurement of a typical performance)

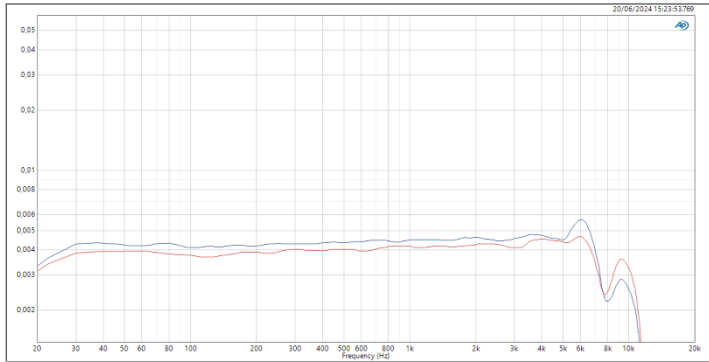


**Figure 6.2**  
THD w/AES17-filter @ 20 Hz --> 20 kHz, 8Vrms, 4 Ω  
(measurement of a typical performance)

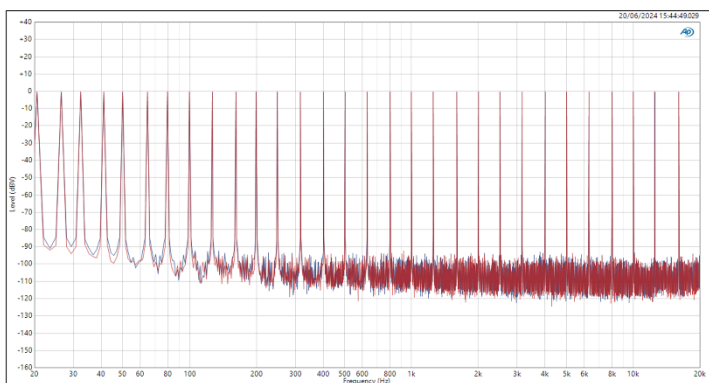

**Figure 6.3**  
IMD spectrum w/AES17-filter @ APx 32 Multitone,  
total test signal amplitude 18Vp, 4 Ω (measurement of  
a typical performance)

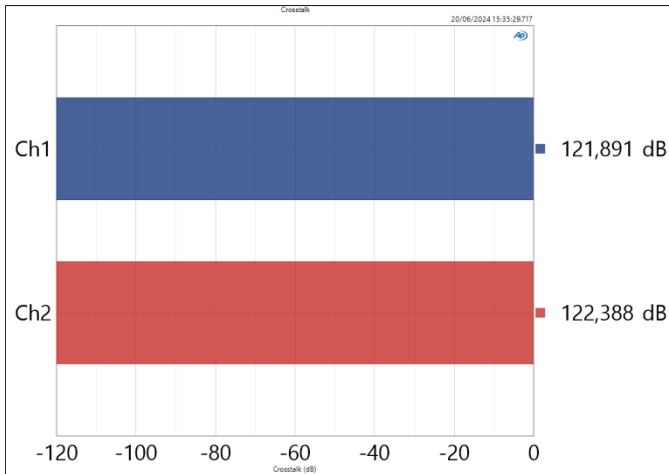

**Figure 6.4**  
Channel separation OR crosstalk  
@ 1KHz  
(measurement of a typical performance)

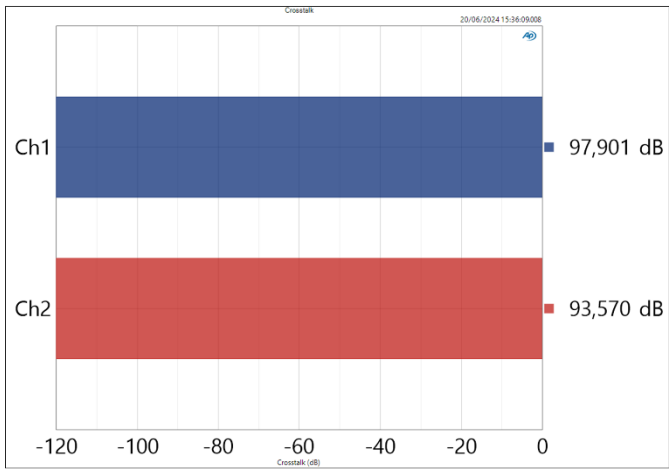

**Figure 6.5**  
Channel separation OR crosstalk  
@ 10KHz  
(measurement of a typical performance)



## 7. WARRANTY

### 7.1 Warranty

CODA Audio guarantees the LINUS V908/D amplifier to be free from defective material and/or workmanship for a period of five (5) years from the date of sale. When a defect occurs under normal installation and use, CODA Audio will repair the product under this warranty. In this event, please return the amplifier to your dealer/distributor together with a copy of your sales receipt as proof of purchase.

This warranty provides that examination of the returned product must indicate in our judgement a manufacturing defect.

### 7.2 Items excluded from this warranty

CODA Audio is not liable for any damage caused by shipping accidents, misuse, abuse, operation with incorrect AC voltage, operation with faulty peripheral equipment, modification or alteration without prior factory approval, service by an unauthorized service centre and normal wear and tear. Amplifiers on which the serial number has been removed or defaced are not eligible for warranty service.

### 7.3 What CODA Audio will do

CODA Audio (or its appointed agent) undertakes to rectify any defect regardless of the reason for failure (unless excluded from this warranty), by repair, replacement or refund as it sees fit.

### 7.4 How to obtain warranty service

You must notify your dealer/distributor of your need for warranty service. All components must be shipped in the original packaging.

### 7.5 CODA Audio's product improvement

CODA Audio reserves the right to improve the technical standard of its products without giving prior notice. If in any doubt, please consult your dealer/distributor or contact CODA Audio directly for clarification. We are always working on making CODA products even better and accessible all over the world. Please check our website for the latest list of approvals and certificates.



**7.6 WARRANTY FORM**

PLEASE ENCLOSE THIS COMPLETED FORM WITH THE AMPLIFIER, DO NOT SEND IT SEPARATELY!

Company name: \_\_\_\_\_

Contact: \_\_\_\_\_

Address: \_\_\_\_\_

Telephone: \_\_\_\_\_

Fax: \_\_\_\_\_

Email address: \_\_\_\_\_

Model: \_\_\_\_\_

Serial number: \_\_\_\_\_

Purchase date: \_\_\_\_\_

Expired warranty/If the warranty has expired, payment will be:

Cash

Cheque

VISA

MasterCard

Shipping address \_\_\_\_\_

To transport the amplifier, the original packing materials must be used. Please return the amplifier to the following address or to your nearest CODA Audio appointed distributor.

Nature of problem occurred. Please describe the conditions that existed when the problem occurred and what attempts were made to correct it:

Other equipment in your system:

Our website: [www.codaaudio.com](http://www.codaaudio.com) provides a complete list of licensed CODA Audio dealers/distributors.



## 8. MAINTENANCE INFORMATION

Cleaning and servicing work on the inside of the amplifier must only be carried out by qualified personnel.

Qualified personnel is defined as a person who has gained specialised relevant knowledge of electronic engineering through education, training, and experience, and who has sufficient knowledge of all relevant governmental work safety regulations to be in a position to judge the safe functioning of power amplifiers based on technical rules according to IEC/ EN 62368-1:2018 ("Safety Requirements for Audio, Video or similar Electronic Appliances").

In order to guarantee the safe functioning of the amplifier, it has to be checked regularly, depending on its application but at least once a year, by a properly qualified person.

Advice on how to carry out these checks can be found in DIN VDE 0701-0702:2008-06 "Safety Checks for Electronic Appliances". An amplifier that is considered to be unsafe must be labelled accordingly and stored in a safe place to prevent this amplifier being used mistakenly.

## 9. DECOMMISSIONING

During the decommissioning process of the amplifier, all legally prescribed rules and procedures must be adhered to.

## 10. WHAT'S IN THE BOX

Shipped with Schuko to PowerCon 32A, 1 m cable

2x Phoenix 1840379 for the GPI inputs and GPO outputs

